

\$8.00

A PAPERBYTE™ BOOK

LINK68




AN M6800 LINKING LOADER

by Robert D. Greenleaf and Jack E. Hemenway

LINK68

AN M6800 LINKING LOADER

by Robert D. Grappel and Jack E. Hemenway

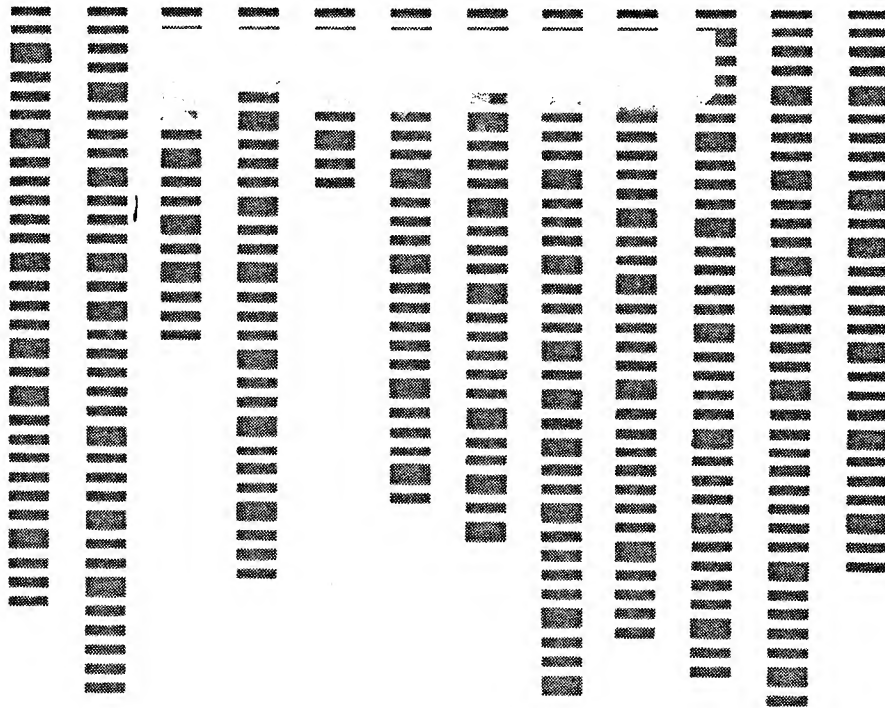

BYTE Publications, Inc.
70 Main Street
Peterborough, New Hampshire 03458

The authors of the programs provided with this book have carefully reviewed them to ensure their performance in accordance with the specifications described in the book. The authors, however, make no warranties whatever concerning the programs, and assume no responsibility or liability of any kind for errors in the programs or for the consequences of any such errors. The programs are the sole property of the authors and have been registered with the United States Copyright Office.

Copyright © 1978 BYTE Publications Inc. All Rights Reserved. BYTE and PAPERBYTE are Trademarks of BYTE Publications Inc. No part of this book may be translated or reproduced in any form without the prior written consent of BYTE Publications, Inc.

Program Copyright © 1978 by Robert D. Grappel, Lexington, Massachusetts and Jack E. Hemenway, Boston, Massachusetts. All Rights Reserved.

Library of Congress Cataloging in Publication Data

Grappel, Robert D.

LINK68-linking loader for the Motorola M6800.

Includes index.

1. LINK68 (Computer program)
2. Linking loaders (Computer programs)
3. Motorola 6800 (Computer) — Programming. I. Hemenway, Jack E., joint author. II. Title.

QA76.8.M67G72 001.6'425 78-17819
ISBN 0-931718-09-0

Printed in the United States of America

Table of Contents

TO BEGIN WITH	v
THE LINKING LOADER	1
INTERFACING AND USING THE LINKING LOADER	7
IO Interface Conventions	7
Tape Driver Routines	7
Disk Driver Routines	8
Execution of the Linking Loader	8
Input Relocatable File Format	9
Relocatable Input Tape Format	9
APPENDICES	11
Appendix A: Error Messages	13
Appendix B: Capacities	13
Appendix C: Notes from a User: Implementation of LINK68	15
Appendix D: LINK68 Assembly Language Object Code in Absolute Hexadecimal Format	17
Appendix E: PAPERBYTE™ Bar Code Representation of LINK68 in Absolute Format	21
Appendix F: Input and Output Routines for LINK68 in Absolute Format with PAPERBYTE™ Bar Code Representation	25
Appendix G: Assembly Language Source Listing of LINK68	31
Appendix H: ASCII Text Listing of the Relocatable Format Object Code for LINK68	39
Appendix I: PAPERBYTE™ Bar Code Representation of Relocatable Format Object Code for LINK68	43
Appendix J: Cassette Tape IO Listing	49
Appendix K: ICOM Floppy Disk IO Listing	55
INDEX	59

To Begin With . . .

LINK68 is a one pass linking loader used to load and link object files produced by the Resident 6800 Macro Assembler RA6800ML (available as a PAPERBYTE™ book). It allows separately translated relocatable object modules to be loaded and linked together to form a single executable load module. LINK68 produces a Load Map and a load module in Motorola MIKBUG loader format.

The Linking Loader requires 2 K bytes of memory, a system console such as a Teletype, a system monitor such as the Motorola MIKBUG read only memory program of the ICOM Floppy Disk Operating System (FDOS), and some form of mass file storage such as dual cassette recorders of a floppy disk. A system monitor other than those mentioned above could be used by changing two IO jumps in the Linking Loader (a jump to the terminal character input routine INEEE and a jump to the terminal character output routine OUTEEE) and by supplying functionally equivalent IO routines for the user's specific system.

This book is divided into three major sections. THE LINKING LOADER provides detailed descriptions of the major routines of the Linking Loader. Included are details about the various routine linkages, pointers, flags, etc. This section provides the necessary background for using the Linking Loader as well as understanding its basic operations.

INTERFACING AND USING THE LINKING LOADER gives information about the IO conventions used, execution of the Linking Loader, and the input file format. Naturally, the exact IO interface needed for using the Linking Loader depends on the actual configuration of the user's system. Therefore, tips are given on how to design IO routines or modify those provided as examples to fit the user's system. This section concludes with a discussion of the methods of preparing the loader for routine use in your system by reading it in and relocating it with a "bootstrap" version pre-linked in absolute format.

The third section is the set of appendices which contain error messages generated by the Linking Loader, the Linking Loader and sample IO driver assembly listings, the bar code representations of the various relocatable object modules of the loader, and an implementation guide for bootstrapping LINK68 and linking loader and IO routines in absolute formats for the bootstrap process.

Finally, a detailed INDEX is included for quick cross-reference to the Linking Loader's routines.

In this book is what we believe to be a complete set of documentation for the Linking Loader. Every flowchart, every listing, every item was included for one purpose: to provide the user with everything needed for the use or modification of the Linking Loader.

In addition, it was the express purpose of the authors to provide everything necessary so that the user can easily learn what he or she needs to know about the system. By providing not only the source code and bar code listings, but also a detailed description of the major routines of the Linking Loader, we intend to provide the user with an opportunity to learn about the nature of linking loader design and implementation, as well as simply acquiring a useful software tool. It is through this kind of encouragement that we hope to advance the state of the art of home computing.

*Robert D. Grappel
Jack E. Hemenway*

The Linking Loader

LINK68 is a one pass Linking Loader designed to load and link relocatable input modules that were separately prepared by assembly or compilation.

The input to LINK68 is the set of output modules produced by the Resident 6800 Macro Assembler RA6800ML (available as a PAPERBYTE™ book). LINK68 links the modules by matching Entry symbols in one module with External symbols in another module(s); it relocates the modules by assigning absolute addresses to relocatable address fields; it assigns absolute addresses from the Common area to address fields which refer to the Common area; and finally, it prints a Load Map which displays the Entry symbols and their assigned absolute addresses.

As LINK68 reads the input object modules, it keeps track of the Entry symbol definitions and External symbol references by storing them in a Symbol Table. The External references are matched with the Entry definitions and the correct absolute address of the Entry symbol is placed into the External reference's address field, completing the linkage.

LINK68 handles the relocation of address fields marked as relocatable in the input module(s) by adding the starting address of the module being loaded to the offset in the address field marked relocatable. This absolute address is then placed into the address field of the loaded module.

Address fields marked as Common in the input modules are handled by adding the starting address of the Common area to the offset in the address field and placing the sum into the address field of the loaded module.

The Load Map (see figure 1) provides information about the loaded and linked module. The first line gives the starting and ending addresses of the load module. This is followed by a listing of all the Entry points in the loaded module along with their absolute addresses. If any of the Entry points are either unresolved or redefined this information is printed next to the absolute address. An Entry marked as unresolved is an External reference that was not resolved, ie: there was no Entry point found for that External symbol. The last line of the Load Map gives the limits of the Common area.

Following are detailed descriptions of the major routines of the Linking Loader.


LOAD

This routine is the driving section for the Linking Loader. Bytes from the input object file are read one at a time and, depending on what they are, jumps are made to processing routines to load, relocate, link, etc. When an End of File (EOF) is encountered, the load limits, Load

Figure 1: Sample Linking Loader run:

- ① : the base address of the new load module.
- ② : the user's upper memory limit.
- ③ : the beginning address of the program's Common area.
- ④ : the beginning and ending addresses of the load module.
- ⑤ : the list of entry symbols for the load module.
- ⑥ : the addresses of the entry symbols for the load module.
- ⑦ : the beginning and ending addresses of the load module's Common area (in this example, the Common area was not used by the program).
- ⑧ : the load module will not be saved.

Note that items ①, ②, ③, and ⑧ are items supplied by the user, and that all remaining items are produced by the Linking Loader.

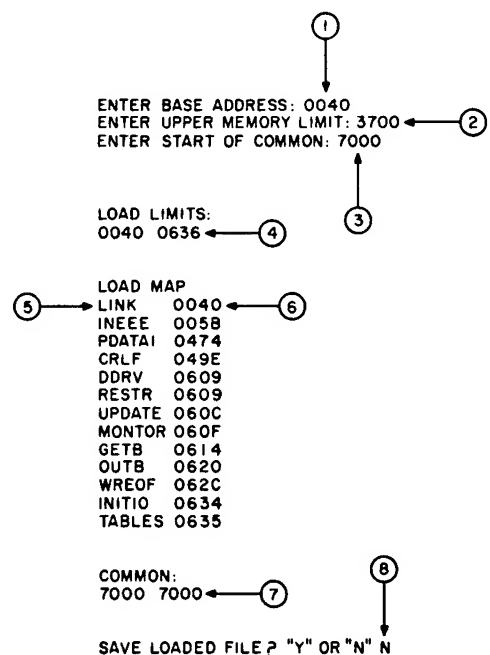

Map, and Common limits are printed. Finally the loaded module is saved (if desired) and control returns to the system monitor.

Calls: BADDR, CRLF, GETB, PDATA1
Jumps: LOADE, LOADM, LOADN, LOADP, LOADR, LOADX
Entrys: LOAD2
Flags: NFLAG
Pointers: BASE, BASESV, CBAS, CBASSV, HICBAS, LAST, NXTSYM, SYMEND, SYMTAB, TABLE, UPLIM
Temporaries: BYTE

LOADE

This routine is executed whenever an End of File (EOF) is encountered in the input object file. The load limits, the Load Map and the Common limits are printed. Next the loader prompts the user to see if the loaded module is to be saved and if so, writes it out in absolute Motorola MIKBUG format. Control is then returned to the system monitor.

Called By: LOAD
Calls: CRLF, INEE, OUT4HS, PDATA1, PRTSYM
Jumps: MONTOR, PUNCH
Pointers: BASESV, CBAS, HICBAS, LAST

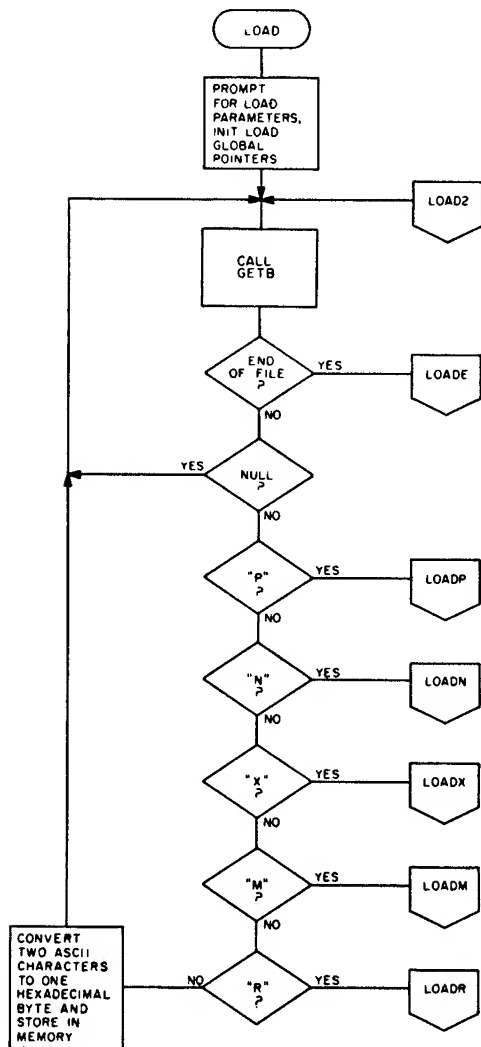


Figure 2: The flowchart for LOAD, the main Linking Loader routine.

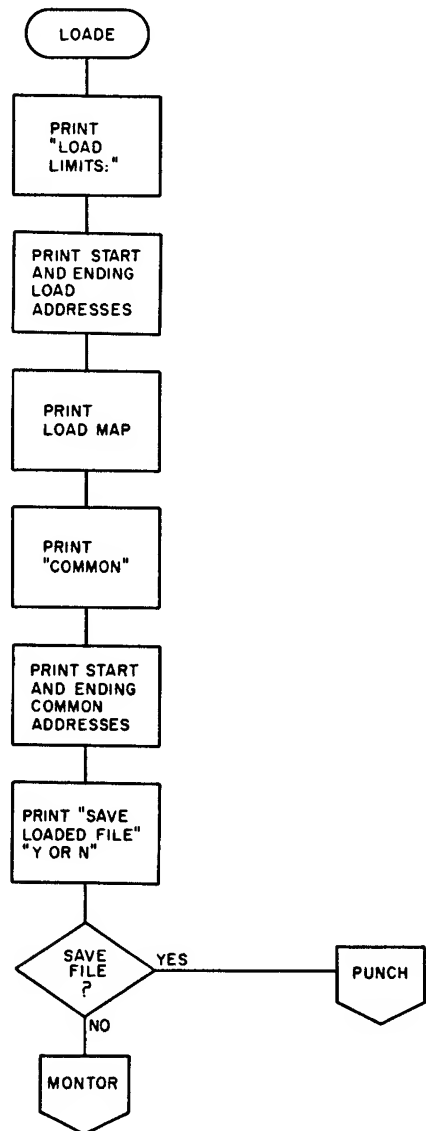


Figure 3: The flowchart for the LOADE routine.

LOADR

This routine relocates an address field in the loaded module by adding the contents of the pointer BASE to the address field. Control is then returned to LOAD2.

Called By: LOAD
Calls: MEMCHK
Jumps: LOAD2
Pointers: BASE

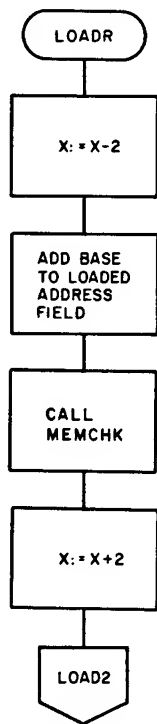


Figure 4: The flowchart for the LOADR routine.

LOADP

This routine is executed whenever a new program is encountered in the input file. The length of Common used by the module is read and saved. The pointer or relocation base is reset to the start of the new module. Control then passes to LOAD2.

Called By: LOAD
Calls: none
Jumps: LOAD2
Pointers: BASE, CBAS, CBASSV, HICBAS

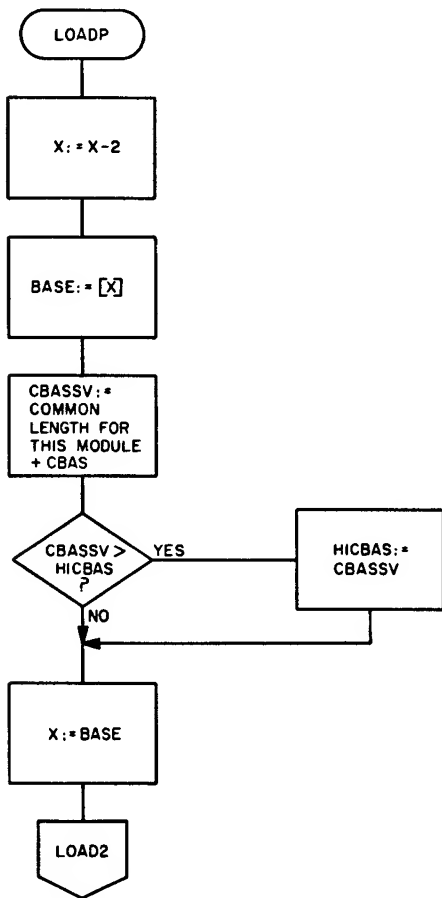


Figure 5: The flowchart for the LOADP routine.

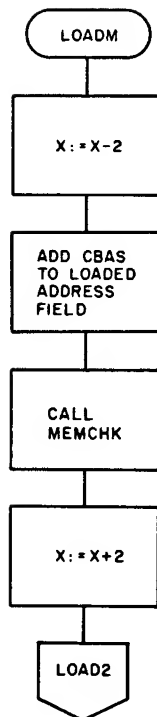


Figure 6: The flowchart for the LOADM routine.

LOADM


This routine relocates an address field that makes a reference to Common from the loaded module. The contents of CBAS are added to the address field. Control then returns to LOAD2.

Called By: LOAD
 Calls: MEMCHK
 Jumps: LOAD2
 Pointers: CBAS

LOADN

This routine handles the processing of Entry symbols from the input file. When an Entry symbol is found, it and its address value are stored in the Symbol Table (SYM-


Figure 7: The flowchart for the LOADN routine.

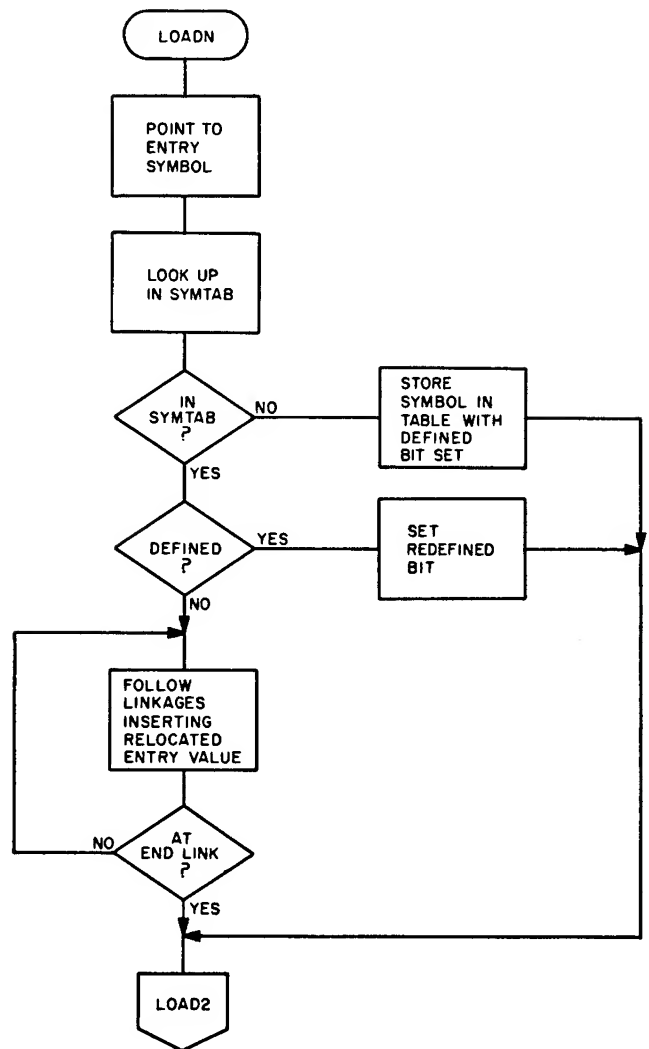

TAB). If the symbol is already in SYMTAB and has had an absolute address already placed in the symbol entry, it is an error. However, symbols may have been stored in SYMTAB by a prior encounter of an External instead of an Entry reference to that symbol. When an External reference is encountered before an Entry reference, the symbol is entered into the Symbol Table without an absolute address entry, and the location of the External reference in the loaded module is linked to the Symbol Table entry using a linked list. LOADN searches this linked list when it finds the symbol is already in SYMTAB and resolves all of the external references linked to the Symbol Table entry.

Called By: LOAD
 Calls: LKPSYM, STOSYM
 Jumps: LOAD2
 Pointers: DESCRA, DESCRC, LAST, LC, SYMPTR

Figure 8: The flowchart for the LOADX routine.

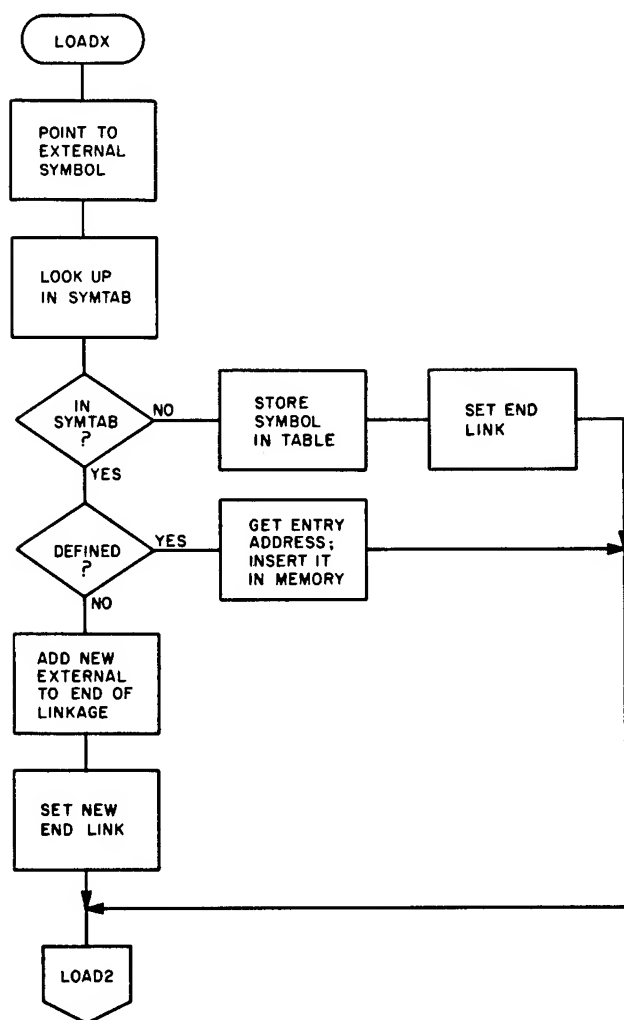

LOADX

This routine processes the External symbols found in the input file. It first searches the Symbol Table (SYMTAB) for the External symbol. If it is there and has an associated entry address defined, the address value is taken from the Symbol Table and stored in the address field of the external reference in the loaded module. If it is not already in the Symbol Table, it is stored in the Symbol Table and the external reference location in the loaded module is stored as the symbol address value. The external reference location is set to hexadecimal FFFF, indicating the end of the linked list.

If the External symbol is already in the Symbol Table but there is no Entry address associated with it, then there are one or more External references linked to the Symbol Table entry using a linked list. The new External reference location is then linked onto the end of this list.

Called By: LOAD
Calls: LKPSYM, STOSYM
Jumps: LOAD2
Pointers: DESCRC, DESCRA, LAST, LC, SYMPTR

STOSYM

This routine stores symbols and their address values into the Symbol Table (SYMTAB). A linear table is used and the pointer NXTSYM points to the next available table location. The routine first checks to see if the Symbol Table is full, and if not, stores the symbol at the location pointed to by NXTSYM. It then increments NXTSYM before returning.

Called By: LOADN, LOADX
Calls: PDATA1
Jumps: MONTOR
Pointers: DESCRA, DESCRC, LC, NXTSYM, SYMEND, SYMPTR, SYMTAB

LKPSYM

This routine searches the Symbol Table for a symbol using a linear search. If the symbol is found, SYMPTR points to the location of the symbol in the table, register B is loaded with the INFO-BYTE, and the X register is loaded with the address value of the symbol.

Called By: LOADN, LOADX
Calls: COMPAR
Jumps: none
Pointers: COUNT, DESCRA, DESCRC, NXTSYM, STRNG1, STRNG2, SYMPTR, SYMTAB

COMPAR

This routine is used to compare variable length strings. The string lengths can be up to 255 bytes. When COMPAR is called the Index register X points to a parameter list of 5 bytes: bytes 1 and 2 provide the address of the first string; bytes 3 and 4 the address of the second string; and byte 5, the number of bytes to be compared.

On return from this routine, the results of the comparison are reflected in the condition codes register.

Example:

```

BNE NOMATCH string1 is not equal to
               string2
BEQ MATCH    string1 is equal to string2
  
```

Called By: LKPSYM, PRTSYM
Calls: none
Flags: none
Pointers: Index register
Temporaries: XSAV

MEMCHK

This routine checks to see if the memory available for the loaded modules is used up. If it is not, the routine returns. If it is, the routine prints an error message and jumps to LOADE to print a partial Load Map.

Called By: LOAD, LOADM, LOADR
Calls: CRLF, PDATA1
Jumps: LOADE
Pointers: UPLIM

PRTSYM

This routine prints the Load Map. It searches the Symbol Table for the lowest valued address entry and then prints the symbol and its address, flagging the entry as printed. The Symbol Table then is searched again, ignoring entries marked as already printed. When all the entries have been printed, the routine returns.

Called By: LOADE
Calls: COMPAR, CRLF, OUTEEE, OUT4HS, OUTS, PDATA1
Jumps: none
Pointers: COUNT, DESCRA, DESCRC, HIVAL, NXTSYM, STRNG1, STRNG2, SYMPTR, SYMTAB

PUNCH

This routine outputs the contents of the loaded program in absolute Motorola MIKBUG format. When it has finished, it writes an End of File (EOF) byte, closes the output file, and passes control to the system monitor.

Called By: LOADE
Calls: OUTB, WEOF
Jumps: UPDATE
Pointers: BASESV, LAST, MCONT, TEMP

Interfacing and Using the Linking Loader

IO Interface Conventions

There are obviously several different methods of reading in an object module, linking it, and finally outputting the load module. The medium used could be memory only, input from and output to cassette tapes, input from and output to floppy disk, input from tape and output to disk, etc. Included in this section on interfacing are sample IO routines for tape to tape and disk to disk systems. This section assumes that the loader has itself been prepared for your system using the "bootstrap" version of the loader as described in Appendix C, Notes from a User: Implementation of Link68.

Looking at the listings of the IO tape and disk routines given in Appendices J and K, notice the various entry points (such as TABLES, OUTB, WREOF, etc.) declared at the beginning. (These same symbols are declared as External in the main loader program.) These are the names of the IO routines which the user must supply for his (her) own system. Note that some of the disk routines are supplied by the author's ICOM Floppy Disk Operating System (FDOS), while for the tape version all of the routines had to be written from scratch. Again, this may or may not be similar to the user's situation depending on the user's system configuration and software. The routines supplied in the cassette tape example could serve as a basis for any routines needed by the user.

Finally, the user should be aware that the actual length of this linking loader and all additional tables and routines as given throughout this book assume the use of the cassette tape IO routines given in Appendix J. This means that if the user supplies his (her) own routines, the lengths and capacities described elsewhere in this book may be affected.

Tape Driver Routines

The following routines are part of a sample tape driver package. They handle the IO functions for a dual cassette tape system.

T1INZ

This routine is used to initialize and start cassette tape for an input operation.

Called By: RDBUF
Calls: TDELY

T1GET

This routine is used to read a character from the input

tape (Tape 1). It checks for read errors and returns the error code in register B. If register B contains a 00 there were no errors.

Called By: RDBUF
Calls: none

T1ISTP

This routine is used to stop Tape 1 after an input operation.

Called By: RDBUF
Calls: none

T2OTZ

This routine is used to initialize and start Tape 2 for an output operation.

Called By: WRITBF
Calls: TDELY

T2OUT

This routine is used to output a character to Tape 2. The character to be written is in register A.

Called By: WRITBF, T2OSTP
Calls: none

T2OSTP

This routine is used to stop Tape 2 after a write operation.

Called By: WRITBF
Calls: T2OUT

RDBUF (Tape)

This routine reads in blocks of source code from the input tape (Tape 1). It places the block of source code in INBUF. On return from this routine, the Index register points to the first location in the input buffer (INBUF)

Called By: GETB
Calls: INEEE, PDATA1, T1GET, T1INZ, T1ISTP

WRITBF (Tape)

This routine writes out blocks of object code to Tape 2 from the output buffer. The variable OTPTR contains the

address of the last byte to be written out when the routine is called, and contains the address of the first byte in the output buffer when the routine returns.

Called By: OUTB, WREOF
Calls: T2OTZ, T2OSTP, T2OUT

Disk Driver Routines

The disk driver routines are all in the bootstrap erasable read only memory included in the ICOM Floppy Disk Operating System (FDOS):

RIX — Read a byte from the disk, placing it in the A register.
WRT — Write a byte to the disk from the A register. The carry flag is set if End of File (EOF).
UPDATE — Close an output file.
FDOS — Load the Floppy Disk Operating System and pass control to it.

Execution of the Linking Loader

These instructions are written assuming two different ways to load and execute the Linking Loader, depending on whether the object code for the Loader itself and the object code of the target program are on cassette tape or diskette. The main difference is the necessity of the ICOM Floppy Disk Operating System (FDOS) for the diskette. The procedures would be similar for any tape or disk system other than the two mentioned.

Cassette Tape Files

To load the Linking Loader (LINK68) from the cassette tape is easily accomplished when the object code for it is stored in absolute Motorola MIKBUG object code format on the typical system. Using the MIKBUG "L" function loads the Linking Loader from tape. The MIKBUG "M" function sets the entry point of LINK68 (3000 hexadecimal) into memory locations A048 and A049 (hexadecimal). Note that using the "M" function merely sets up a jump address for the start of the Loader. If MIKBUG is not being used as a monitor, this may be accomplished in other ways.

LINK68 executes as a one pass linking loader, reading the input target program object code from the cassette once, and optionally placing the linked load module onto a second cassette tape. The object code tape would go in the first cassette recorder, the load module tape in the second tape machine. Ready the cassette tape in tape drive 1 for a read operation.

After this setup, using the MIKBUG "G" function begins execution of the Linking Loader, which starts by requesting:

ENTER BASE ADDRESS:

Enter the 4 hexadecimal digit base address at which the load module is to begin. Next:

ENTER UPPER MEMORY LIMIT:

which is a request for the last memory location in the user's

system that is available for loading. Finally:

ENTER START OF COMMON:

where the beginning address of the memory being used for the Common area is entered. LINK68 then reads, loads, and links the input file.

When an End of File (EOF) condition is encountered on the input tape, the Linking Loader types:

EOF:REPOSITION TAPE AND TYPE CR OR TYPE A 'D' IF DONE

If there are more modules to be loaded and linked, place the appropriate cassette tape into the input drive and set the controls for a read operation. Then type a carriage return (CR). The loader then loads the new file. When there are no more files to be loaded, type a "D".

When LINK68 completes loading and linking, it types the load limits of the new load module:

LOAD LIMITS:
"XXXX YYYY"

where "XXXX" is the first memory location of the load module and the "YYYY" is the last memory location of the load module. LINK68 then lists the Load Map (see figure 1) consisting of all the Entry symbols and their associated loaded addresses.

The Linking Loader's final message is to enquire:

SAVE LOADED FILE? 'Y' OR 'N'

If the load module is to be saved, place a tape into tape drive 2 and set the controls for a write operation. Then type "Y". LINK68 saves the load module in the standard Motorola MIKBUG load format and returns control to the system monitor. If "N" is typed in response to the prompt, the load module is *not* saved, and control returns directly to the system monitor.

If there has been any tape read errors in the above process, the Linking Loader messages:

TAPE ERROR

and stops the input tape. The user should reposition the tape to the beginning of the block that produced the error and type a carriage return (CR). LINK68 will then attempt to reread the tape.

Note that the loaded program can now be executed by using the Motorola MIKBUG function "M" to place the module's entry address into memory locations A048 and A049 (hexadecimal) and then using the "G" function to begin execution.

Diskette Files

The Linking Loader is located on diskette under the name "LINK" and is loaded and executed using the ICOM Floppy Disk Operating System (FDOS) command "RUNGO". But before the Linking Loader can be executed, the input object modules should be merged into one file by using the "MERGE" command.

Example:

MERGE,%TEST,PROG1,PROG2,PROG3

This merges the 3 programs PROG1, PROG2, and PROG3 into one file named "%TEST." %TEST would then be the input to the Linking Loader.

Example:

RUNGO, LINK, %TEST, TEST

This loads LINK, opens %TEST for input, opens TEST for output, and executes LINK.

The Linking Loader begins execution by requesting the base address of the load module:

ENTER BASE ADDRESS:

to which the user enters the 4 hexadecimal digit base address at which the load module is to begin. Next:

ENTER UPPER MEMORY LIMIT:

which is a request for the last memory location in the user's system that is available for loading. And finally:

ENTER START OF COMMON:

where the beginning address of the memory being used for the Common area is entered. LINK68 then reads, loads, and links the input file.

When the Linking Loader completes loading and linking, it types the load limits of the new load module:

LOAD LIMITS:

"XXXX YYYY"

where "XXXX" is the first memory location of the load module and "YYYY" is the last location of the load module. LINK68 then lists the Load Map (see figure 1) consisting of all the Entry symbols and their associated loaded addresses.

The Linking Loader's final message is to enquire:

SAVE LOADED FILE? 'Y' OR 'N'

If the load module is to be saved, type a "Y" and LINK68 saves the file under the name given to the output file when LINK68 was executed. Control then returns to the disk operating system. If "N" is typed in response to the

prompt, the load module is *not* saved and control returns directly to the disk operating system.

Note that the loaded program can now be executed by using the Motorola MIKBUG function "M" to place the module's entry address into memory locations A048 and A049 (hexadecimal), and then using the "G" function to begin execution.

Input Relocatable File Formats

The relocatable input file contains all of the information needed by the Linking Loader to process and load files. There are six different types of information present in the input file:

1. Object code ----- HHHHHHHHHHH
2. Relocatable address fields -- HHHHR
3. Common address fields ---- HHHHM
4. Name fields ----- HHHHPSSSSSHHHHRN

a
b
c
5. Entry fields ----- SSSSSHHHHRN

d
e
6. External fields ----- SSSSSX

f

where "SSSSSS" is a 6 character Symbol

H is a hexadecimal character representing half a byte of object code

R is the relocation indicator

M is the Common indicator

P is the Program indicator

N is the Entry indicator

X is the External indicator

and

a is the Common length

b is the Program name

c is the Entry value

d is the Entry symbol

e is the Entry value

f is the External symbol.

RELOCATABLE INPUT TAPE FORMAT

The Linking Loader input file is object code prepared by the Relocatable Macro Assembler and when recorded on audio cassette tape it is arranged in blocks. The maximum length (n+2, where n is the length of the object code) is set by the output buffer in the Macro Assembler. It is normally set to 512 bytes. The format is:

Bytes 1 to n Relocatable object code and information for the Linking Loader

Byte n+1 End of Transmission Block (ETB) (17 hexadecimal)

Byte n+2 Checksum character byte; it is the one's compliment of the summation of bytes 1 to n.

The last block on the tape is followed by an End of File (EOF) block; it contains only one byte, an EOF character (04 hexadecimal).

APPENDICES

Appendix A: Error Messages

Apart from the tape error messages already discussed, the Linking Loader provides the following error messages:

SYMBOL TABLE OVERFLOW —

The Linking Loader's Symbol Table has been filled up. Reduce the number of External/Entry symbols or add additional space to the Linking Loader's Symbol Table.

******* MEMORY OVERRUN ***** —**

There was not enough memory available to load the entire program.

REDEFINED

UNRESOLVED —

For each entry listed in the Load Map, one or both of these error messages may be printed if the symbol is not resolved or is defined in more than one module.

Appendix B: Capacities

Linking Loader (total)	2 K
Linking Loader (actual code)	1.5 K
Cassette Tape IO Routines	.5 K
Symbol Table (SYMTAB)	75 entries, 9 bytes per entry

APPENDIX C

Notes from a User: Implementation of Link68

by Walter Banks, University of Waterloo

Implementation of Link68 is accomplished by a bootstrap procedure which ultimately results in a linker specifically tailored to a unique system. This is accomplished with the use of two absolute modules presented in Appendices D and F.

In normal use RA6800ML generates relocatable object modules which are linked together by LINK68 to form a load module of absolute code. The linker itself is generated as a relocatable load module requiring linking with input and output drivers to form a usable load module. This has been overcome with the use of two absolute load modules found in Appendices D and F. The LINKER load module contains a copy of the linker, linked to location \$0100 without any external references satisfied. The overlay modules contain external reference code for use with a standard MIKBUG-based system. This overlay is designed to facilitate easy initial implementation of LINK68 and serve as a template for user developed software.

The linker calls external routines through the use of a jump table which starts at location \$0106. Subroutine calls within the linker go through the jump table to the overlayed routines and control is returned to the linker with an RTS instruction.

The IO structure of LINK68 assumes four separate data paths. INCH and OUTCH are input and output byte routines to the user console device. INB and OUTB are communication paths from the linker to mass storage devices such as disk, tape, or paper tape. They are used to load the relocatable modules for linking and output absolute code modules.

The jump table calls GETB which is a subroutine used to get data from a relocatable object input stream. The overlay prompts users to load new tapes when end-of-tape is sensed.

The calls to MONTOR and UPDATE are used to return control to the user supervisor program. UPDATE expects the user routine to close all open files. MONTOR is a direct entry to the user supervisor.

INITIO calls a routine which initializes IO devices and drivers. It is not needed in the simple overlay; however, room is left for a subroutine jump to a new program.

WROEOF writes an end-of-file (\$04) to the output data stream.

An exception to the use of the jump table is the reference to TABLES. TABLES is used as a pointer to a data area of memory and is used only as a pointer. It must be noted that the first two locations in memory pointed to by TABLES must contain the address of TABLES+2.

Users can load a simple version of the linker by loading the absolute code module found in bar code form in Appendix E. The overlay package may be loaded on top of the linker and the combined code can be dumped to a convenient mass storage device such as a floppy disk or cassette tape. Future modifications can be made in two ways. First, the overlay package can be tailored to the unique requirements of a particular system. The absolute code may be dumped generating a new load module. Second, the whole package of linker and overlay can be linked from object files and a new load module generated.

APPENDIX D

LINK68 Assembly Language Object Code in Absolute Hexadecimal Format

The listing below gives the absolute object code for the linking loader LINK68 in hexadecimal format. This listing can be used to manually load the program or to verify entry of the program via the PAPER-BYTE™ bar code representation in Appendix E. Note that each line in this listing does not correspond directly to the variable length records of the bar codes, but uses a fixed length of 16 data bytes per line. The data is preceded by a 2 byte address field. Note that this program begins at hexadecimal 0100. Information on how to use this version of the linking loader to bootstrap LINK68 for the first time is given in Appendix C, with Appendix F giving details of IO routines appropriate for the bootstrap process.

```

0100 8E A0 42 7E 01 47 7E FF FF 7E FF FF 7E FF FF 7E
0110 FF FF 7E FF FF 7E FF FF 7E FF FF 7E E1 AC 7E E1
0120 D1 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0130 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0140 00 00 00 00 00 00 00 00 BD 01 15 FE 01 07 86 A3 C6
0150 02 AB 01 E9 00 B7 01 2F F7 01 2E EE 00 FF 01 2C
0160 FF 01 2A 7F 01 23 BD 05 5E CE 05 7F BD 05 34 BD
0170 04 FA BD 05 5E FF 01 21 FF 01 41 CE 05 94 BD 05
0180 34 BD 04 FA FF 01 45 BD 05 5E CE 05 AF BD 05 34
0190 BD 04 FA BD 05 5E FF 01 3B FF 01 3D FF 01 3F FE
01A0 01 21 BD 01 0C 25 52 81 00 27 F7 81 50 26 03 7E
01B0 02 7B 81 4E 26 03 7E 02 C5 81 58 26 03 7E 03 32
01C0 81 4D 26 03 7E 02 AA 81 52 26 03 7E 02 60 80 30
01D0 81 09 2F 02 80 07 7D 01 23 26 0C 48 48 48 48 B7
01E0 01 24 73 01 23 20 BB F6 01 24 1B A7 00 FF 01 43
01F0 08 BD 04 E1 73 01 23 20 A9 BD 05 5E BD 05 5E CE
0200 05 EC BD 05 34 BD 05 5E CE 01 41 BD 05 44 CE 01
0210 43 BD 05 44 BD 05 5E BD 05 5E BD 04 42 BD 05 5E
0220 CE 05 C7 BD 05 34 BD 05 5E CE 01 3B BD 05 44 FE
0230 01 3F BC 01 3B 27 04 09 FF 01 3F CE 01 3F BD 05
0240 44 BD 05 5E BD 05 5E CE 06 18 BD 05 34 BD 01 1B
0250 81 59 26 06 BD 05 5E 7E 06 38 BD 05 5E 7E 01 09
0260 09 09 A6 01 E6 00 BB 01 22 F9 01 21 A7 01 E7 00
0270 08 BD 04 E1 08 BD 04 E1 7E 01 A2 09 09 FF 01 21
0280 A6 01 E6 00 BB 01 3C F9 01 3B B7 01 3E F7 01 3D
0290 B6 01 40 F6 01 3F B0 01 3E F2 01 3D 24 06 FE 01
02A0 3D FF 01 3F FE 01 21 7E 01 A2 09 09 A6 01 E6 00
02B0 BB 01 3C F9 01 3B A7 01 E7 00 08 BD 04 E1 08 BD
02C0 04 E1 7E 01 A2 C6 06 F7 01 29 09 09 A6 00 B7 01
02D0 25 A6 01 B7 01 26 09 09 09 09 09 09 09 09 FF 01 43 FF
02E0 01 27 BD 03 D5 C1 FF 26 0E BD 03 95 FE 01 30 6C
02F0 08 FE 01 43 7E 01 A2 C5 01 27 09 CA 80 FE 01 30
0300 E7 08 20 ED FF 01 27 B6 01 25 F6 01 26 FE 01 30
0310 6C 08 A7 06 E7 07 FE 01 27 EE 00 FF 01 30 FE 01
0320 27 A7 00 E7 01 FE 01 30 8C FF FF 27 C4 FF 01 27
0330 20 E7 C6 06 F7 01 29 09 09 09 09 09 09 09 FF 01 27
0340 FF 01 25 08 08 FF 01 43 BD 03 D5 C1 FF 26 12 BD
0350 03 95 FE 01 25 86 FF A7 00 A7 01 FE 01 43 7E 01
0360 A2 FE 01 30 E6 08 C5 01 27 0D A6 06 E6 07 FE 01
0370 25 A7 00 E7 01 20 E4 EE 06 FF 01 27 EE 00 8C FF
0380 FF 26 F6 B6 01 25 F6 01 26 FE 01 27 A7 00 E7 01
0390 FE 01 25 20 C0 FE 01 2A FF 01 30 BC 01 2E 26 09
03A0 CE 05 69 BD 05 34 7E 01 09 FE 01 27 A6 00 08 FF
03B0 01 27 FE 01 2A A7 00 08 FF 01 2A 7A 01 29 26 E9
03C0 B6 01 25 A7 00 B6 01 26 A7 01 86 00 A7 02 08 08
03D0 08 FF 01 2A 39 FE 01 2C BC 01 2A 27 2B FF 01 30
03E0 FF 01 32 FE 01 27 FF 01 34 B6 01 29 B7 01 36 CE
03F0 01 32 BD 04 13 27 14 FE 01 30 08 08 08 08 08 08
0400 08 08 08 BC 01 2A 26 D5 C6 FF 39 FE 01 30 E6 08
0410 EE 06 39 36 37 E6 04 FF 01 37 FE 01 37 EE 00 A6
0420 00 FE 01 37 6C 01 26 02 6C 00 FE 01 37 EE 02 A1

```

```

0430 00 26 0C FE 01 37 6C 03 26 02 6C 02 5A 26 DB 33
0440 32 39 CE 05 F9 BD 05 34 BD 05 5E FE 01 2C BC 01
0450 2A 27 56 CE FF FF FF 01 39 FE 01 2C FF 01 30 86
0460 FF A1 08 27 1C 08 08 08 08 08 08 FF 01 32 CE 01
0470 39 FF 01 34 86 02 B7 01 36 CE 01 32 BD 04 13 25
0480 13 FE 01 30 08 08 08 08 08 08 08 08 BC 01 2A
0490 27 0F 20 C8 FE 01 30 FF 01 27 EE 06 FF 01 39 20
04A0 E0 CE FF FF BC 01 39 26 01 39 FE 01 27 C6 06 A6
04B0 00 08 BD 01 1E 5A 26 F7 BD 05 48 BD 05 44 E6 00
04C0 C5 01 26 06 CE 06 02 BD 05 34 C5 80 27 06 CE 06
04D0 0E BD 05 34 BD 05 5E FE 01 27 86 FF A7 08 7E 04
04E0 53 BC 01 45 27 01 39 BD 05 5E CE 05 CF BD 05 34
04F0 BD 05 5E 31 31 7E 01 F9 00 00 8D 0C B7 04 F8 8D
0500 07 B7 04 F9 FE 04 F8 39 8D 09 48 48 48 16 8D
0510 02 1B 39 BD 01 1B 80 30 2B 0F 81 09 2F 0A 81 11
0520 2B 07 81 16 2E 03 80 07 39 86 3F BD 01 1E 20 E3
0530 BD 01 1E 08 A6 00 81 04 26 F6 39 A6 00 8D 0E A6
0540 00 08 20 0D 8D F5 8D F3 86 20 7E 01 1E 44 44 44
0550 44 84 0F 8B 30 81 39 23 02 8B 07 7E 01 1E 86 0D
0560 BD 01 1E 86 0A BD 01 1E 39 53 59 4D 42 4F 4C 20
0570 54 41 42 4C 45 20 4F 56 45 52 46 4C 4F 57 04 45
0580 4E 54 45 52 20 42 41 53 45 20 41 44 44 52 45 53
0590 53 3A 20 04 45 4E 54 45 52 20 55 50 50 45 52 20
05A0 4D 45 4D 4F 52 59 20 4C 49 4D 49 54 3A 20 04 45
05B0 4E 54 45 52 20 53 54 41 52 54 20 4F 46 20 43 4F
05C0 4D 4D 4F 4E 3A 20 04 43 4F 4D 4D 4F 4E 3A 04 2A
05D0 2A 2A 2A 2A 2A 20 4D 45 4D 4F 52 59 20 4F 56 45
05E0 52 52 55 4E 20 2A 2A 2A 2A 2A 04 4C 4F 41 44
05F0 20 4C 49 4D 49 54 53 3A 04 4C 4F 41 44 20 4D 41
0600 50 04 55 4E 52 45 53 4F 4C 56 45 44 20 04 52 45
0610 44 45 46 49 4E 45 44 04 53 41 56 45 20 4C 4F 41
0620 44 45 44 20 46 49 4C 45 3F 20 22 59 22 20 4F 52
0630 20 22 4E 22 20 04 00 00 B6 01 44 B0 01 42 F6 01
0640 43 F2 01 41 26 04 81 10 25 02 86 0F 8B 04 B7 06
0650 36 80 03 B7 06 37 CE 06 C4 BD 06 B6 5F CE 06 36
0660 8D 33 CE 01 41 BD 06 95 BD 06 95 FE 01 41 BD 06
0670 95 7A 06 37 26 F8 FF 01 41 53 37 30 BD 06 95 33
0680 FE 01 41 09 BC 01 43 26 AF CE 06 BD BD 06 B6 BD
0690 01 12 7E 01 18 EB 00 A6 00 8D 05 A6 00 08 20 04
06A0 44 44 44 44 84 0F 8B 30 81 39 23 02 8B 07 BD 01
06B0 0F 39 BD 01 0F 08 A6 00 81 04 26 F6 39 0D 0A 53
06C0 39 0D 0A 04 0D 0A 53 31 04

```

APPENDIX E

PAPERBYTE™ Bar Code Representation of Link68 in Absolute Format

Beginning on the following page is a complete machine readable representation (PAPERBYTE™ bar codes) of the object code for Grappel and Hemenway's linking loader LINK68. The object code was created by assembling LINK68 using the relocatable macro assembler, available as the PAPERBYTE™ book RA6800ML: An M6800 Relocatable Macro Assembler (ISBN 0-931718-10-4). See Appendix G for a listing of the 6800 assembly language source code of the linking loader.

This representation uses the absolute loader format, in which each bar code frame (one line of bar codes running from top to bottom of the page) contains a 2 byte address followed by data which is loaded in ascending order starting at that address. A hexadecimal listing that can be used to verify the input from bar codes is given in Appendix D. For details on the frame format and absolute loader format used in this and other PAPERBYTE™ books, see PAPERBYTE publication *Bar Code Loader* by Ken Budnick. The book contains a brief history on bar codes, a general bar code loader algorithm with flowcharts, and complete program listings for 6800, 6502, and 8080 or Z-80 based systems.

Information on how to use this version of the linking loader to bootstrap LINK68 for the first time is given in Appendix C, with Appendix F giving details of IO routines appropriate for the bootstrap process.

APPENDIX F

Input and Output Routines for LINK68 in Absolute Format with PAPERBYTE™ Bar Code Representation

These overlay modules contain external reference code to the linking loader LINK68 for use with a standard MIKBUG-based system. This overlay is designed to facilitate easy initial implementation of LINK68 and serve as a template for user developed software. These routines can be used in conjunction with the version of LINK68 given in Appendices D and E to bootstrap LINK68 for the first time. Details of the bootstrap process are given in Appendix C.

On page 29 is the machine readable representation (PAPERBYTE™ bar codes) of the object code of the IO routines listed below. The representation uses the absolute loader format, in which each bar code frame (one line of bars running from top to bottom of the page) contains a 2 byte address followed by data which is loaded in ascending order starting at that address.

For details on the frame and absolute loader format used in this and all PAPERBYTE™ books, see the PAPERBYTE publication *Bar Code Loader* by Ken Budnick. This book contains a brief history on bar codes, a general bar code loader algorithm with flowcharts, and complete program listings for 6800, 6502, and 8080 or Z-80 based systems.

00001			NAM	LINKIO	
00003	0100	START	EQU	\$0100	START OF THE LINKER
00005	E1AC	INCH	EQU	\$E1AC	INPUT CHAR (MIKBUG)
00006	E1D1	OUTCH	EQU	\$E1D1	OUTPUT CHAR (MIKBUG)
00007	E1AC	INB	EQU	\$E1AC	INPUT DATA CHAR TO LINKER
00008	E1D1	OUTB	EQU	\$E1D1	OUT DATA CHAR FROM LINKER
00009	E0E3	MONTOR	EQU	\$E0E3	EXIT BACK TO MONITOR (MIKBUG)
00010	E0E3	UPDATE	EQU	\$E0E3	CLOSE OUTPUT FILES ,EXIT
00012	0106		ORG	START+6	
00014	0106 7E 0731		JMP	TABLES	START OF SYMBOL TABLE
00015	0109 7E E0E3		JMP	MONTOR	MONITOR START ADDRESS
00016	010C 7E 06CD		JMP	GETB	READ A BYTE FROM RELOCATION
00017		*			INPUT STRING
00018	010F 7E E1D1		JMP	OUTB	WRITE A BYTE
00019	0112 7E 06FA		JMP	WREOF	WRITE EOF ON SAVE FILE
00020	0115 7E 06C9		JMP	INITIO	INIT IO DEVICES
00021	0118 7E E0E3		JMP	UPDATE	CLOSE AN OUTPUT FILE
00022	011B 7E E1AC	INEEE	JMP	INCH	INPUT CHAR TO ACC A FROM
00023		*			CONSOLE
00024	011E 7E E1D1	OUTEEE	JMP	OUTCH	OUTPUT BYTE IN ACC A
00026	0534	PDAT1	EQU	START+\$0434	PRINT CHAR STRING
00027	055E	CRLF	EQU	START+\$045E	PRINT <CR> <LF>
00029	06C9		ORG	START+\$05C9	START AT THE END OF
00030		*			THE LINKER
00032	06C9 01	INITIO	NOP		INITIALIZE I/O DRIVERS
00033	06CA 01		NOP		
00034	06CB 01		NOP		
00035	06CC 39		RTS		
00037	06CD FF 072F	GETB	STX	DXSV	SAVE INDEX REGISTER
00038	06D0 BD E1AC	GET1	JSR	INB	INPUT A DATA CHARACTER
00039	06D3 81 04		CMP A	#\$04	IS IT END OF FILE
00040	06D5 26 16		BNE	XIT	NO EXIT
00041	06D7 CE 0700		LDX	#EOF	YES PRINT EOF MESSAGE ON
00042		*			CONSOLE
00043	06DA BD 0534		JSR	PDAT1	
00044	06DD BD 011B	RD6	JSR	INEEE	FOR CONSLE RESOPONSE
00045	06E0 81 0D		CMP A	#\$0D	<CR> START READING NEXT TAPE

00046	06E2	27 EC		BEQ	GET1	
00047	06E4	81 44		CMP A	#'D	D THIS WAS THE LAST TAPE
00048	06E6	26 F5		BNE	RD6	
00049	06E8	FE 072F		LDX	DXSV	RESTORE INDEX
00050	06EB	0D		SEC		SET CARRY END OF FILE
00051	06EC	39		RTS		
00052	06ED	81 0D	XIT	CMP A	#\$0D	
00053	06EF	27 DF		BEQ	GET1	
00054	06F1	81 2F		CMP A	#' /	STRIP OFF CONTROL CHARACTERS
00055	06F3	2D DB		BLT	GET1	
00056	06F5	FE 072F		LDX	DXSV	RESTORE INDEX REGISTER
00057	06F8	0C		CLC		CLEAR CARRY NOT EOF
00058	06F9	39		RTS		
00060	06FA	96 04	WREOF	LDA A	4	LOAD ASCII EOF
00061	06FC	BD E1D1		JSR	OUTB	OUTPUT IT TO DATA STREAM
00062	06FF	39		RTS		
00064	0700	0D0A	EOF	FDB	\$0D0A	<CR><LF>
00065	0702	454F46		FCC	/EOF: NEXT TAPE,TYPE CR/	
	0705	3A204E				
	0708	455854				
	070B	205441				
	070E	50452C				
	0711	545950				
	0714	452043				
	0717	52				
00066	0718	0D0A		FDB	\$0D0A	<CR><LF>
00067	071A	545950		FCC	/TYPE	"D" IF DONE/
	071D	452020				
	0720	202244				
	0723	222049				
	0726	462044				
00068	072C	0D0A		FDB	\$0D0A	<CR><LF>
00069	072E	04		FCB	4	
00071	072F	0002	DXSV	RMB	2	SAVE SPACE FOR TEMP STORAGE OF
00072			*			THE INDEX REGISTER
00074	0731	0733	TABLES	FDB	*+2	START OF SYMBOL TABLE
00076				END		

APPENDIX G

Assembly Language Source Listing of LINK68

This assembly was executed using the relocatable macro assembler RA6800ML available in the PAPER-BYTE™ book *RA6800ML: An M6800 Relocatable Macro Assembler* by Jack Hemenway (ISBN 0-931718-10-4). The object code in the assembly listing can be used without relocation if the program is loaded at location zero (hexadecimal) in memory. When creating a final object module for the loader, hand entered overlays for the Motorola MIKBUG monitor or the ICOM Floppy Disk Operating System IO routines will be necessary. The routines given in Appendices J and K can be used directly with their respective operating system, or as guidelines for coding patches to interface the above systems or other monitor programs.

```

0000 0000 N      NAM LINK    LINKING LOADER
*
*      C COPYRIGHT 1977 BY
*      ROBERT D. GRAPPEL LEXINGTON MASS.
*      AND JACK E. HEMENWAY BOSTON MASS.
*      ALL RIGHTS RESERVED
*
0000 8E A042 LDS #A042
0003 7E 0047 R JMP LOAD
*
0006 7E 0000 X EXI TABLES    START OF SYMTAB
0009 7E 0000 X EXI MONITOR    MONITOR
000C 7E 0000 X EXT GETB     READ A BYTE
000F 7E 0000 X EXI OUTB     WRITE A BYTE
0012 7E 0000 X EXI WEOF     WRITE EOF
0015 7E 0000 X EXT INITIO   INIT FOR I/O
0018 7E 0000 X EXI UPDATE   CLOSE AN OUTPUT FILE
*
*
001B 001B N      ENT INEEB
001B 0434 N      ENT PDATA1
001B 045E N      ENT CRLF
*
*
001B 7E E1AC INEEB JMP SEIAC INPUT A CHAR
001E 7E E1D1 OUTIEEB JMP SEID1 OUTPUT A CHAR TO TTY
0021 0002 BASE RMB 2    BASE ADDRESS
0023 0001 NFLAG RMB 1    NIBBLE FLAG 00=LEFT, FF=RIGHT
0024 0001 BYTE RMB 1     TEMPORARY LOCATION
0025 0002 LC RMB 2       LOCATION COUNTER
0027 0002 DESCRA RMB 2    DESCRIPTOR ADDRESS
0029 0001 DESCRC RMB 1    DESCRIPTOR COUNT
002A 0002 NXTSYM RMB 2    NEXT ENTRY IN SYMTAB
002C 0002 SYMTAB RMB 2    SYMBOL TABLE
002E 0002 SYMEND RMB 2    END OF TABLE
0030 0002 SYMPTR RMB 2    SYMTAB POINTER
0032 0002 STRNG1 RMB 2    PARM LIST
0034 0002 STRNG2 RMB 2    FOR
0036 0001 COUNT RMB 1     COMPARE
0037 0002 XSAV RMB 2       TEMP
0039 0002 HIVAL RMB 2       HIGHEST COMMON COUNT
003B 0002 CBAS RMB 2       START OF COMMON
003D 0002 CBASSV RMB 2     CBAS SAVE TEMP
003F 0002 HICBAS RMB 2     END OF COMMON
0041 0002 BASESV RMB 2     FIRST LOCATION
0043 0002 LAST RMB 2       LAST LOCATION
0045 0002 UPLIM RMB 2      UPPER MEMORY LIMIT
*
*
* LOAD IS THE ENTRY POINT TO THE LOADER
*
0047 BD 0015 R LOAD JSR INITIO   INIT THE I/O
004A FE 0007 R LDX TABLES+1 POINT TO START OF SYMTAB
004D 86 A3 LDA A #A3 ADD SPACE FOR 75 SYMBOLS
004F C6 02 LDA B #02
0051 A8 01 ADD A 1,X ADD TO START OF SYMTAB
0053 E9 00 ADC B 0,X
0055 B7 002F R STA A SYMEND+1 INIT
0058 F7 002E R STA B SYMEND
005B EE 00 LDX 0,X GET START OF SYMTAB
005D FF 002C R STX SYMTAB INIT
0060 FF 002A R STX NXTSYM INIT
*
0063 7F 0023 R CLR NFLAG NFLAG=LEFT
0066 BD 045E R JSR CRLF
*
0069 CE 047F R LDX #MSG1 GET BASE ADDRESS
006C BD 0434 R JSR PDATA1
006F BD 03FA R JSR BADDR GET VALUE IN HEX
0072 BD 045E R JSR CRLF
0075 FF 0021 R STX BASE INIT
0078 FF 0041 R STX BASESV INIT
*
007B CE 0494 R LDX #MSG4 GET UPPER MEMORY LIMIT
007E BD 0434 R JSR PDATA1
0081 BD 03FA R JSR BADDR GET VALUE IN HEX
0084 FF 0045 R STX UPLIM INIT
0087 BD 045E R JSR CRLF
*
008A CE 04AF R LDX #MSGB GET START OF COMMON
008D BD 0434 R JSR PDATA1
0090 BD 03FA R JSR BADDR INIT
0093 BD 045E R JSR CRLF
0096 FF 003B R STX CBAS INIT
0099 FF 003D R STX CBASSV INIT
009C FF 003F R STX HICBAS INIT
009F FE 0021 R LDX BASE GET START OF MEMORY
*
*
00A2 BD 000C R LOAD2 JSR GETB GET A BYTE
00A5 20 52 BCS LOAD2 EOF
*
00A7 81 00 CMP A #500 NULL?
00A9 27 F7 BEQ LOAD2 YES
*
00AB 81 50 CMP A #4P PROGRAM MODULE2
00AD 26 03 BNE **5
*
00AF 7E 017B R JMP LOADP YES
*
00B2 81 4E CMP A #4N ENTRY ?
00B4 26 03 BNE **5 NO
*
00B6 7E 01C5 R JMP LOADN YES
*
00B9 81 58 CMP A #4X EXTERNAL ?
00BB 26 03 BNE **5 NO
*
00BD 7E 0232 R JMP LOADX YES
*
00C0 81 4D CMP A #4M "COMMON"?
00C2 26 03 BNE **5 NO
*
00C4 7E 01AA R JMP LOADM YES
*
00C7 81 52 CMP A #4R RELOCATABLE ?
00C9 26 03 BNE **5 NO
*
00CB 7E 0160 R JMP LOADR YES
*
* CONVERT TWO ASCII BYTES TO ONE HEX BYTE
*
00CE 80 30 SUB A #530
00D0 81 09 CMP A #509
00D2 2F 02 BLE **4
00D4 80 07 SUB A #507
*
00D6 7D 0023 R TST NFLAG WHICH NIBBLE ?
00D9 26 0C BNE RNIBL RIGHT
*
00DB 48 ASL A LEFT
00DC 48 ASL A
00DD 48 ASL A
00DE 48 ASL A
00DF B7 0024 R STA A BYTE SAVE LEFT NIBBLE
00E2 73 0023 R COM NFLAG SET FOR RIGHT NIBBLE
00E5 20 BB BRA LOAD2
*
00E7 F6 0024 R RNIBL LDA B BYTE GET LEFT NIBBLE
00EA 18 ABA
00EB A7 00 STA A 0,X
00ED FF 0043 R STX LAST LOADED ADDRESS
00F0 08 INX
00F1 BD 03E1 R JSR MEMCHK CHECK MEMORY LIMIT
00F4 73 0023 R COM NFLAG SET FOR LEFT NIBBLE
00F7 20 A9 BRA LOAD2
*
* EOF FINISH LOAD
*
00F9 BD 045E R LOAD2 JSR CRLF
00FC BD 045E R JSR CRLF

```

34

0252 FE 0025 R	LUX LC		02FE 08	INX	
0255 86 FF	LOADX2 LDA A #5FF	SET END LINK	02FF 03	INX	
0257 A7 00	STA A 0,X		0300 08	INX	
0259 A7 01	STA A 1,X		0301 08	INX	
	*		0302 08	INX	
025b FE 0043 R	LOADX3 LUX LAST	LOAD NEW LAST	0303 BC 002A R	CPX NXTSYM	END OF ENTRIES ?
025E 7E 00A2 R	JMP LOAD2		0306 26 05	BNE LKPSY1	NO
	*			*	
0261 FE 0030 R	LOADX4 LDX SYMPTR	POINT TO SYMBOL ENTRY		* NOT IN SYMTAB	
0264 E6 0a	LDA B 8,X	GET INFO BYTE		*	
0266 C5 01	BIT B #501	DEFINED ?	0308 C6 FF	LKPSY3 LDA B #5FF	
0268 27 0D	BEQ LOADX5	NO	030A 39	RTS	
	*			*	
026A A6 06	LDA A 6,X	GET ENTRY ADDRESS		* FOUND SYMBOL	
026C E6 07	LDA B 7,X			*	
026E FE 0025 R	LDX LC		030B FE 0030 R	LKPSY2 LDX SYMPTR	
0271 A7 00	STA A 0,X		030E E6 08	LDA B 8,X	
0273 E7 01	STA B 1,X	SAVE ADDRESS	0310 EE 06	LDX 6,X	GET VALUE
0275 20 E4	BRA LOADX3		0312 39	RTS	
	*			*	
0277 EE 06	LOADX5 LDX 6,X	GET FIRST LINK		* COMPARE TWO STRINGS	
	*			* ON ENTRY [X] = A PARM LIST OF 5 BYTES:	
0279 FF 0027 R	LOADX6 STX DESCRA	FOLLOW LINKAGE		* A (STRING1)	
027C EE 00	LUX 0,X			* A (STRING2)	
027E 8C FFFF	CPX %5FFF	END LINK ?		* COUNT OF BYTES TO BE COMPARED	
0281 2a F0	BNE LOADX6	NO		* ON RETURN IF CC Z IS SET THERE WAS A MATCH	
	*			*	
0283 B6 0025 R	LDA A LC		0313 36	COMPAR PSH A	
0286 F6 0026 R	LDA B LC+1		0314 37	PSH B	
0289 FE 0027 R	LDX DESCRA		0315 E6 04	LDA B 4,X	GET COUNT
028C A7 00	STA A 0,X		0317 FF 0037 R	STX XSAV	SAVE PARM POINTER
028E E7 01	STA B 1,X	NEW LINK ADDRESS	031A FE 0037 R	LDX XSAV	GET PARM POINTER
0290 FE 0025 R	LUX LC		031D EE 00	LDX 0,X	GET A (STRING1)
0293 20 C0	BRA LOADX2	SET NEW END LINK	031F A6 00	LDA A 0,X	GET A CHAR
	*		0321 FE 0037 R	LDX XSAV	
	* SYMBOL TABLE ROUTINES		0324 6C 01	INC 1,X	PTR SET TO NEXT
	*		0326 26 02	BNE CMP2	CHAR IN
	* STORE SYMBOL IN SYMTAB		0328 6C 00	INC 0,X	STRING1
	*		032A FE 0037 R	LDX XSAV	GET PARM POINTER
0295 FE 002A R	STOSYM LDX NXTSYM	SAVE ENTRY ADDRESS	032D EE 02	LDX 2,X	GET A (STRING2)
0298 FF 0030 R	STX SYMPTR	FULL ?	032F A1 00	CMP A 0,X	COMPARE
029B BC 002E R	CPX SYMEND		0331 26 0C	BNE CDONE	NOT EQUAL
029E 26 09	BNE STOSY1	NO	0333 FE 0037 R	LDX XSAV	GET PARM POINTER
	*		0336 6C 03	INC 3,X	PTR SET TO NEXT
02A0 CE 0469 R	LDX %SYMFUL	ERROR	0338 26 02	BNE CMP3	CHAR IN
02A3 BD 0434 R	JSR PDATA1		033A 6C 02	INC 2,X	STRING2
02A6 7E 0009 R	JMP MONITOR	RETURN TO EXEC	033C 5A	CMP3 DEC B	DEC COUNT
	*		033D 26 DB	BNE CMP1	TRY AGAIN
	* MOVE SYMBOL TO SYMTAB		033F 33	CDONE PUL B	DONE
	*		0340 32	PUL A	
02A9 FE 0027 R	STOSY1 LDX DESCRA	GET ADDRESS OF SYMBOL	0341 39	RTS	
02AC A6 00	LDA A 0,X			*	
02AE 08	INX			* PRINT LOAD MAP	
02AF FF 0027 R	STX DESCRA			*	
02B2 FE 002A R	LDX NXTSYM		0342 CE 04F9 R	PRISYM LDX %MAPMSG	"LOAD MAP"
02B5 A7 00	STA A 0,X		0345 BD 0434 R	JSR PDATA1	
02B7 08	INX		0348 BD 045E R	JSR CRLF	
02B8 FF 002A R	STX NXTSYM		034B FE 002C R	LDX SYMTAB	
02BB 7A 0029 R	DEC DESCRC		034E BC 002A R	CPX NXTSYM	ANY SYMBOLS?
02BE 26 E9	BNE STOSY1		0351 27 56	BEQ PRISM3	NO
	*			*	
02C0 B6 0025 R	LDA A LC	GET LC		*	
02C3 A7 00	STA A 0,X	STORE		* FIND LOWEST VALUED ENTRY TO PRINT	
02C5 B6 0026 R	LDA A LC+1			*	
02C8 A7 01	STA A 1,X			*	
02CA 86 00	LDA A #500	SET INFO BIT	0353 CE FFFF	SORT LDX %5FFF	
02CC A7 02	STA A 2,X		0356 FF 0039 R	SIX HIVAL	
02CE 08	INX		0359 FE 002C R	LDX SYMTAB	
02CF 08	INX			*	
02D0 08	INX		035C FF 0030 R	SORT1 STX SYMPTR	
02D1 FF 002A R	STX NXTSYM		035F 86 FF	LDA A #5FF	
02D4 39	RTS		0361 A1 08	CMP A 8,X	ALREADY PRINTED?
	*		0363 27 1C	BEQ SORT2	YES
	* LOOKUP SYMBOL IN SYMTAB			*	
02D5 FE 002C R	LKPSYM LDX SYMTAB		0365 08	INX	
02D8 BC 002A R	CPX NXTSYM	EMPTY TABLE?	0366 08	INX	
02DB 27 2B	BEQ LKPSY3	YES	0367 08	INX	
	*		0368 08	INX	
02DD FF 0030 R	LKPSY1 STX SYMPTR		0369 08	INX	
02E0 FF 0032 R	STX STRNG1		036A 08	INX	
02E3 FE 0027 R	LDX DESCRA		036B FF 0032 R	STX STRNG1	POINT TO ENTRY
02E6 FF 0034 R	STX STRNG2		036E CE 0039 R	LDX #HIVAL	
02E9 B6 0029 R	LDA A DESCRC		0371 FF 0034 R	STX STRNG2	POINT TO HIVAL
02EC B7 0036 R	STA A COUNT		0374 86 02	LDA A #2	
02EF CE 0032 R	LUX #STRNG1		0376 B7 0036 R	STA A COUNT	
02F2 BD 0313 R	JSR COMPAR		0379 CE 0032 R	LDX #STRNG1	POINT TO PARMS
02F5 27 14	BEQ LKPSY2	MATCH	037C BD 0313 R	JSR COMPAR	
	*		037F 25 13	BCS SORT3	ENTRY < HIVAL
02F7 FE 0030 R	LDX SYMPTR			*	
02FA 08	INX		0381 FE 0030 R	SORT2 LDX SYMPTR	
02FB 03	INX		0384 08	INX	
02FC 08	INX		0385 08	INX	
02FD 08	INX		0386 08	INX	
			0387 08	INX	

36

```

04CF 2A      MSGD   FCC '***** MEMORY OVERRUN *****'
04EB 04

*
04EC 4C      MSGE   FCC 'LOAD LIMITS'
04F8 04

*
04F9 4C      MAPMSG FCC 'LOAD MAP'
0501 04

*
0502 55      UNRES   FCC 'UNRESOLVED'
050U 04

*
050E 52      REDEF   FCC 'REDEFINED'
0517 04

*
0518 53      SAVFIL  FCC 'SAVE LOADED FILE? "Y" OR "N" '
053D 04

* PUNCH: OUTPUT LOAD MODULE IN MIKBUG FORMAT
* (BASESV - LAST)

0536 0001     MCONT  RMB 1
0537 0001     TEMP   RMB 1

*
0538 0538     R PUNCH EQU *

*
0538 B6 0044 R PUN11 LDA A LAST+1
0538 B0 0042 R      SUB A BASESV+1
053E F6 0043 R      LDA B LAST
0541 F2 0041 R      SBC B BASESV
0544 26 04         BNE PUN22

*
0546 81 10         CMP A #16
0548 25 02         BCS PUN23

*
054A 86 0F         PUN22 LDA A #15

*
054C 8B 04         PUN23 ADD A #4
054E B7 0536 R     STA A MCONT
0551 80 03         SUB A #3
0553 B7 0537 R     STA A TEMP

*
0556 CE 05C4 R     LDX #MTAPE1
0559 BD 05B6 R     JSR DDATA1
055C 5F           CLR B

*
* OUTPUT FRAME COUNT
*
055D CE 0536 R     LDX #MCONT
0560 8D 33         BSR PUNT2

*
* OUTPUT ADDRESS
*
0562 CE 0041 R     LDX #BASESV
0565 BD 0595 R     JSR PUNT2
0566 BD 0595 R     JSR PUNT2

*
* OUTPUT DATA
*
056B FE 0041 R     LDX BASESV

*
056E BD 0595 R     PUN32 JSR PUNT2
0571 7A 0537 R     DEC TEMP
0574 26 F8         BNE PUN32

*
0576 FF 0041 R     STX BASESV
0579 53           COM B
057A 37           PSH B
057B 30           TSX
057C BD 0595 R     JSR PUNT2
057F 33           PUL B
0580 FE 0041 R     LDX BASESV
0583 09           DEX
0584 BC 0043 R     CPX LAST
0587 26 AF         BNE PUN11

*
0589 CE 05BD R     LDX #EOF
058C BD 05B6 R     JSR DDATA1

*
058F BD 0012 R     JSR WREOF

*
0592 7E 0018 R     JMP UPDATE

*
0595 EB 00         PUNT2 ADD B 0,X
0597 A6 00         OUT2HD LDA A 0,X
0599 80 05         BSR OUTHLL
059B A6 00         LDA A 0,X
059D 08           INX
059E 20 04         BRA OUTHRR

*
05A0 44           OUTHLL LSR A
05A1 44           LSR A

```

```

05A2 44           LSR A
05A3 44           LSR A

*
05A4 84 0F         OUTHRR AND A #5F
05A6 88 30         ADD A #530
05A8 81 39         CMP A #539
05AA 23 02         BLS OTHRR

*
05AC 8B 07         ADD A #7

*
05AE BD 000F R     OTHRR JSR OUTB
05B1 39           RTS

*
05B2 BD 000F R     DDATA2 JSR OUTB
05B5 08           INX
05B6 A6 30         LDA A 0,X
05B8 81 04         CMP A #4
05BA 26 F6         BNE DDATA2

*
05BC 39           RTS

*
05BD 050A         EOF    FDB $0DOA
05BF 53           FCC '59'
05C1 050A         FDB $0DOA
05C3 04           FCB 4

*
05C4 050A         MTAPE1 FDB $0DOA
05C6 53           FCC '51'
05C8 04           FCB 4

*
END

BADDR 03FA R      MSGC 04C7 R
BASE 0021 R       MSGD 04CF R
BASESV 0041 R     MSGE 04EC R
BXSAV 03F8 R      MSGL 047F R
BYIE 0024 R       MTAPE1 05C4 R
CBAS 003B R       NFLAG 0023 R
CBASSV 003D R     NOIHEX 0429 R
CUONE 033F R      NXISYM 002A R
CMP1 031A R       OTHRR 05AE R
CMP2 032A R       OUT2H 043B R
CMP3 033C R       OUT2HA 043D R
COMPAR 0313 R     OUT2HD 0597 R
COUNT 0036 R    OUT2HS 0446 R
CRLF 045E RN     OUT4HS 0444 R
DDATA1 05B6 R    OUTB 000F RX
DDATA2 05B2 R    OUTCH 045B R
DESCRA 0027 R   OUTEEE 001E R
DESCRC 0029 R   OUTHL 044D R
EOF 05BD R      OUTHLL 05A0 R
GETB 000C RX    OUTHR 0451 R
HICBAS 003F R   OUTHRR 05A4 R
HIVAL 0039 R    OUTS 0448 R
INBYTE 0408 R   PDATA1 0434 RN
INEEE 001B RN   PDATA2 0430 R
INHEX 0413 R    PRISM0 03AA R
INHEXR 0428 R   PRISM1 03AD R
INITIO 0015 RX  PRISM2 03AF R
LAST 0043 R     PRISM3 03A9 R
LC 0025 R       PRISM4 03CA R
LINK 0000 RN    PRISM5 03DA R
LKPSY1 02DD R   PRISYM 0342 R
LKPSY2 030B R   PUN11 0538 R
LKPSY3 030B R   PUN22 054A R
LKPSYM 02D5 R   PUN23 054C R
LOAD 0047 R     PUN32 056E R
LOAD2 00A2 R    PUNCH 0538 R
LOADE 00F9 R    PUNT2 0595 R
LOADE1 013B R   REDEF 050E R
LOADM 01AA R    RNIBL 00E7 R
LOADN 01C5 R    SAVFIL 0518 R
LOADN3 01F1 R   SORT 0553 R
LOADN4 01F7 R   SORT1 055C R
LOADN5 0219 R   SORT2 0381 R
LOADN6 0204 R   SORT3 0394 R
LOADP 017B R    SORT4 03A1 R
LOADP1 01A4 R   SIOSY1 02A9 R
LOADR 0160 R    SIOSYM 0295 R
LOADX 0232 R    SIRNG1 0032 R
LOADX2 0255 R   SIRNG2 0034 R
LOADX3 025B R   SYMEND 002E R
LOADX4 0261 R   SYMFUL 0469 R
LOADX5 0277 R   SYMP1R 0030 R
LOADX6 0279 R   SYA1AB 002C R
MAPMSG 04F9 R   TABLES 0006 RX
MCONT 0536 R    TEMP 0537 R
MEMCHK 03E1 R   UNRES 0502 R
MEMCKE 03E7 R   UPDATE 0018 RX
MONITOR 0009 RX UPLIM 0045 R
MSGA 0494 R     WREOF 0012 RX
MSGB 04AF R     XSAV 0037 R

```


APPENDIX H

ASCII Text Listing of the Relocatable Format Object Code for LINK68

The listing on the following page gives the relocatable format object code of the linking loader LINK68 in ASCII text format. This listing can be used to enter the program by hand or to verify the entry of the program via the bar codes given in Appendix I. Note that the ends of lines in this verification listing *do not* represent line feed or carriage return codes within the machine readable text. See *Input Relocatable File Format* on page 15 for a description of the relocation conventions.

Once LINK68 has been bootstrapped (see Appendix C), the relocatable file of the linking loader can be run through the loader in order to reposition LINK68 at an arbitrary, more convenient address if low memory is not the ideal location in the user's system. This form of the linking loader object code will not be needed by users who can employ the absolute object code version of LINK68 given in Appendices D or E without further relocation.

Appendix G gives an assembly language source listing for LINK68.

0000P4C494E4B20200000RN8EA0427E0047R7E5441424C4553X7E4D4F4E544F5
2X7E474554422020X7E4F5554422020X7E5752454F4620X7E494E4954494FX7E
555044415445X494E45454520001BRN5044415441310434RN43524C462020045
ERN7EEIAC7EEID100
00
00
F7002EREE00FF002CRFF002AR7F0023RBD045ERCE047FRBD0434RBD03FARBD04
5ERFF0021RFF0041RCE0494RBD0434RBD03FARFF0045RBD045ERCE04AFRBD043
4RBD03FARBD045ERFF003BRFF003DRFF003FRFE0021RBD000CR2552810027F78
15026037E017BR814E26037E01C5R815826037E0232R814D26037E01AAR81522
6037E0160R803081092F0280077D0023R260C48484848B70024R730023R20BBF
60024R1BA700FF0043R08BD03E1R730023R20A9BD045ERBD045ERCE04ECRBD04
34RBD045ERCE0041RBD0444RCE0043RBD0444RBD045ERBD045ERBD0342RBD045
ERCE04C7RBD0434RBD045ERCE003BRBD0444RFE003FRBC003BR270409FF003FR
CE003FRBD0444RBD045ERBD045ERCE0518RBD0434RBD001BR81592606BD045ER
7E0538RBD045ER7E0009R0909A601E600BB0022RF90021RA701E70008BD03E1R
08BD03E1R7E00A2R0909FF0021RA601E600BB003CRF9003BRB7003ERF7003DRB
60040RF6003FRB0003ERF2003DR2406FE003DRFF003FRFE0021R7E00A2R0909A
601E600BB003CRF9003BRA701E70008BD03E1R08BD03E1R7E00A2RC606F70029
R0909A600B70025RA601B70026R090909090909FF0043RFF0027RBD02D5RC1FF
260EBD0295RFE0030R6C08FE0043R7E00A2RC5012709CA80FE0030RE70820EDF
F0027RB60025RF60026RFE0030R6C08A706E707FE0027REE00FF0030RFE0027R
A700E701FE0030R8CFFFFF27C4FF0027R20E7C606F70029R090909090909FF002
7RFF0025R0808FF0043RBD02D5RC1FF2612BD0295RFE0025R86FFA700A701FE0
043R7E00A2RFE0030RE608C501270DA606E607FE0025RA700E70120E4EE06FF0
027REE008CFFFFF26F6B60025RF60026RFE0027RA700E701FE0025R20C0FE002A
RFF0030RBC002ER2609CE0469RBD0434R7E0009RFE0027RA60008FF0027RFE00
2ARA70008FF002AR7A0029R26E9B60025RA700B60026RA7018600A702080808F
F002AR39FE002CRBC002AR272BFF0030RFF0032RFE0027RFF0034RB60029RB70
036RCE0032RBD0313R2714FE0030R0808080808080808BC002AR26D5C6FF39
FE0030RE608EE06393637E604FF0037RFE0037REE00A600FE0037RC0126026C
00FE0037REE02A100260CFE0037R6C0326026C025A26DB333239CE04F9RBD043
4RBD045ERFE002CRBC002AR2756CEFFFFF0039RFE002CRFF0030R86FFA10827
1C080808080808FF0032RCE0039RFF0034R8602B70036RCE0032RBD0313R2513
FE0030R0808080808080808BC002AR270F20C8FE0030RFF0027REE06FF0039
R20E0CEFFFFFBC0039R260139FE0027RC606A60008BD001ER5A26F7BD0448RBD0
444RE600C5012606CE0502RBD0434RC5802706CE050ERBD0434RBD045ERFE002
7R86FFA7087E0353RBC0045R270139BD045ERCE04CFRBD0434RBD045ER31317E
00F9R00008D0CB703F8R8D07B703F9RFE03F8R398D0948484848168D021B39BD
001BR80302B0F81092F0A81112B0781162E03800739863FBD001ER20E3BD001E
R08A600810426F639A6008D0EA60008200D8DF58DF386207E001ER44444444484
0F8B30813923028B077E001ER860DBD001ER860ABD001ER3953594D424F4C205
441424C45204F564552464C4F5704454E5445522042415345204144445245535
33A2004454E544552205550504552204D454D4F5259204C494D49543A2004454
E544552205354415254204F4620434F4D4D4F4E3A2004434F4D4D4F4E3A042A2
A2A2A2A204D454D4F5259204F56455252554E202A2A2A2A2A2A044C4F41442
04C494D4954533A044C4F4144204D415004554E5245534F4C564544200452454
44546494E45440453415645204C4F414445442046494C453F20225922204F522
0224E2220040000B60044RB00042RF60043RF20041R260481102502860F8B04B
70536R8003B70537RCE05C4RBD05B6R5FCE0536R8D33CE0041RBD0595RBD0595
RFE0041RBD0595R7A0537R26F8FF0041R533730BD0595R33FE0041R09BC0043R
26AFCE05BDRBD05B6RBD0012R7E0018REB00A6008D05A6000820044444444484
0F8B30813923028B07BD000FR39BD000FR08A600810426F6390D0A53390D0A04
OD0A533104

APPENDIX I

PAPERBYTE™ Bar Code Representation of Relocatable Format Object Code for LINK68

Beginning on the following page is a complete machine readable representation (PAPERBYTE™ bar codes) of the relocatable object code for Grappel and Hemenway's linking loader LINK68. The format is that of an ASCII text string without carriage return or line feed conventions. Appendix H is a direct listing of this file using fixed length lines to make it fit the confines of a printed page. See *Input Relocatable File Format* on page 15 for a description of the relocation conventions.

This representation uses the bar code text format, in which each bar code frame (one line of bar codes running from top to bottom of the page) contains a segment of the ASCII relocatable format object text. The text must be loaded into memory and then saved on the user's mass storage device. For details on the text format used in this and other PAPERBYTE™ books, see the PAPERBYTE publication *Bar Code Loader* by Ken Budnick. The book contains a brief history on bar codes, a general bar code loader algorithm with flowcharts, and complete program listings for 6800, 6502, and 8080 and Z-80 based systems.


Once LINK68 has been bootstrapped (see Appendix C), the relocatable file of the linking loader can be run through the loader in order to reposition LINK68 at an arbitrary, more convenient address if low memory is not the ideal location in the user's system. This form of the linking loader object code will not be needed by users who can employ the absolute object code version of LINK68 given in Appendices D or E without further relocation.

46

0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1
8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 0 0 0 0 0 0 0 0 0 0
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1
8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 0 0 0 0 0 0 0 0 0 0
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

1
2
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

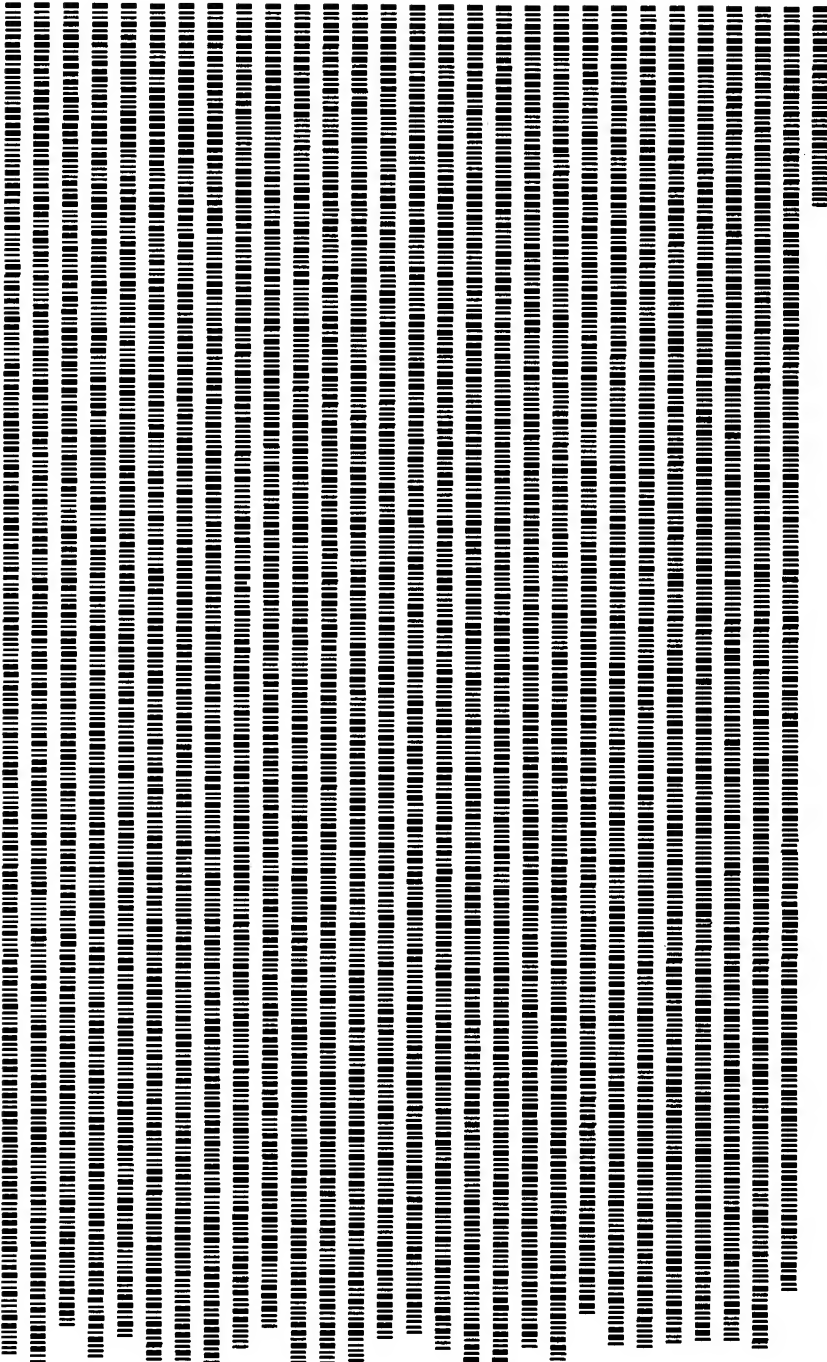

1
2
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

APPENDIX J

Cassette Tape IO Listing


```

0000 0000    N      NAM TDRIVERS
                *
                *      TAPE DRIVERS FOR LINKING LOADER
                *      C COPYRIGHT 1977 BY
                *      ROBERT D. GRAPPEL LEXINGTON MASS.
                *      AND JACK E. HEMENWAY BOSTON MASS.
                *      ALL RIGHTS RESERVED
                *
                *      ROUTINES IN THE LINKING LOADER
                *
0000 7E 0000 X      EXT PDATA1
0003 7E 0000 X      EXT INEE
0006 7E 0000 X      EXT CRLF
                *
                *      ENTRY POINTS IN DRIVER
                *
0009 01D6    N      ENT TABLES
0009 0009    N      ENT UPDATE
0009 000C    N      ENT MONTOR
0009 0016    N      ENT GETB
0009 0035    N      ENT OUTB
0009 0062    N      ENT WREOF
0009 0051    N      ENT INITIO
                *
                *      LOCATIONS IN MIKBUG
                *
0009 7E E0E3    UPDATE JMP $E0E3
000C 7E E0E3    MONTOR JMP $E0E3
                *
000F 0001      CKSUM   RMB 1
0010 0002      INPTR   RMB 2
0012 0002      OTPTR   RMB 2
0014 0002      DXSV    RMB 2
                *
                *      GET A BYTE RETURN IN A REGISTER
                *
0016 FF 0014 R GETB   STX DXSV
0019 FE 0010 R      LDX INPTR
001C A6 00      LDA A 0,X      GET A CHAR
001E 81 17      CMP A #$17     ETB ?
0020 26 06      BNE GETBI      NO
                *
0022 37
0023 BD 0074 R      JSR RDBUF      READ ANOTHER BLOCK
0026 33      PUL B
0027 24 01      BCC GETBI
                *
0029 39      RTS      EOF
                *
002A A6 00      GETBI LDA A 0,X      GET CHAR
002C 08      INX
002D FF 0010 R      STX INPTR
0030 FE 0014 R      LDX DXSV
0033 0C      CLC
0034 39      RTS
                *
                *      OUTPUT BYTE IN A REGISTER
                *
0035 FF 0014 R OUTB   STX DXSV
0036 FE 0012 R      LDX OTPTR
0036 8C 05D5 R      CPX #OTBUF+$1FD FULL?
003E 26 07      BNE OUTBI      NO
                *
0040 36      PSH A
0041 37      PSH B
0042 BD 011E R      JSR WRITBF
0045 32      PUL A
0046 33      PUL B
                *
0047 A7 00      OUTBI STA A 0,X      SAVE CHAR
0049 08      INX
004A FF 0012 R      STX OTPTR
004D FE 0014 R      LDX DXSV
0050 39      RTS
                *
                *
0051 CE 01D8 R INITIO LDX #INBUF
0054 FF 0010 R      STX INPTR
0057 86 17      LDA A #$17
0059 A7 00      STA A 0,X
                *
005B CE 03D8 R      LDX #OTBUF
005E FF 0012 R      STX OTPTR
0061 39      RTS
                *
                *      CLOSE OUTPUT FILE
                *
0062 BD 011E R WREOF JSR WRITBF
0065 FE 0012 R      LDX OTPTR
0068 86 04      LDA A #4
006A A7 00      STA A 0,X

```

```

006C 08          INX
006D FF 0012 R   STX OTPTR
0070 BD 011E R   JSR WRITBF
0073 39          RTS

      * READ IN A BLOCK FROM TAPE 1 *
      *
0074 7F 000F R   RDBUF CLR CKSUM
0077 CE 0108 R   LDX #INBUF POINT TO INBUF
007A BD 0153 R   JSR TI1NZ START TAPE 1
007D BD 0176 R   JSR T1GET GET CHAR
0080 5D          TST B OK ?
0081 26 18       BNE RD2 NO

      *
0083 A7 00       STA A 0,X PUT IN INBUF
0085 08          INX BUMP POINTER
0086 81 04       CMP A #504 EOF?
0088 27 1E       BEQ RD4 YES
008A 81 17       CMP A #517 ETB?
008C 26 EF       BNE RD1 NO
008E 8C 03D7 R   CPX #INBUF+517 OVERRRIN ?
0091 27 08       BEQ RD2 YES
0093 BD 0176 R   JSR T1GET GET CKSUM BYTE
0096 7C 000F R   INC CKSUM OK ?
0099 27 05       BEQ RD3 YES

      *
009B CE 00F7 R   LDX #TAPEERR BAD
009E 20 05       BRA RD5 FINISH UP

      *
00A0 BD 018E R   JSR T11STP STOP TAPE 1
00A3 CE 0108 R   LDX #INBUF INIT INPTR
00A6 0C          CLC
00A7 39          RTS

      *
00AB CE 008E R   LDX #EOF EOF MSG
00AB BD 018E R   JSR T11STP STOP TAPE
00AE BD 0000 R   JSR PDATA1 PRINT MESSAGE
00B1 BD 0003 R   JSR INEEE WAIT FOR "GO"
00B4 81 00       CMP A #500 CR ?
00B6 27 BC       BEQ RDBUF TRY AGAIN

      *
00B8 81 44       CMP A #50D DONE?
00BA 26 F5       BNE RD6 NO
00BC 00          SEC YES
00BD 39          RTS RETURN

      *
      *
00BE 45          EOF FCC 'EOF*REPOSITION TAPE AND TYPE CR'
00C0 000A        FDB $000A CR,LF
00C1 4F          FCC 'OR TYPE A "D" IF DONE'
00C2 000A        FDB $000A CR,LF
00C3 04          FCB 4 EOT

      *
00C5 54          TAPEERR FCC 'TAPE ERROR*BACK UP A BLOCK & TYPE CR'
00C6 000A        FDB $000A CR,LF
00C7 04          FCB $04 EOT

      * WRITBF: WRITE OUT OTBUF TO TAPE2
      *
011E 37          *WRITBF PSH B
011F FE 0012 R   LDX OTPTR
0122 8C 03D8 R   CPX #OTBUF EMPTY
0125 27 22       BEQ WRITBFC YES

      *
0127 86 17       LDA A #517 LOAD ETB
0129 A7 00       STA A 0,X PUT INTO OTBUF
012B CE 03D8 R   LDX #OTBUF POINT TO OTBUF
012E 5F          CLR B CLR CKSUM REG
012F BD 0196 R   JSR T20TZ START TAPE

      *
0132 A6 00       *WRITBFA LDA A 0,X GET CHAR
0134 EB 00       ADD B 0,X ADD TO CKSUM
0136 BD 01B1 R   JSR T20UT
0139 BC 0012 R   CPX OTPTR DONE ?
013C 27 03       BEQ WRITBFB

      *
013E 08          INX NO
013F 20 F1       BRA WRITBFA DO AGAIN

      *
0141 53          *WRITBFB COM B FORM CKSUM
0142 17          TBA BYTE
0143 BD 01B1 R   JSR T20UT
0146 BD 01BE R   JSR T20STP STOP TAPE

      *
0149 CE 03D8 R   *WRITBFC LDX #OTBUF
014C FF 0012 R   STX OTPTR INIT OTPTR
014F 33          PUL B
0150 39          RTS

      * TAPE DRIVERS:
      *
0151 8010        TP1ST EQU $8010
0151 8011        TP1DAT EQU $8011
0151 8014        TP2ST EQU $8014

```

```

0151 8015      TP2DAT EQU $8015
0151 0002      TXSV   RMB 2
*
*
* START TAPE FOR A READ*
*
0153 FF 0151 R T1INZ STX TXSV
0156 36          PSH A
0157 86 17      LDA A #$17    MASTER RESET, RTS:=0
0159 B7 8010    STA A TP1ST
*
015C 86 5D      LDA A #$5D    RTS:=1
015E B7 8010    STA A TP1ST
*
0161 CE 0280    LDX #$0280    DELAY 1 SEC
0164 BD 01CE R  JSR TDELY
*
0167 86 57      LDA A #$57    MASTER RESET
0169 B7 8010    STA A TP1ST
016C 86 5D      LDA A #$5D    RTS:=1
016E B7 8010    STA A TP1ST
0171 32          PUL A
0172 FE 0151 R  LDX TXSV
0175 39          RTS
*
* READ A BYTE
*
0176 F6 8010    T1GET LDA B TP1ST GET STATUS
0179 C5 01      BIT B #$01    RDRF?
017B 27 F9      BEQ *-5       NO
*
017D C5 70      BIT B #$70    ERRORS?
017F 27 01      BEQ *-3       NO
*
0181 39          RTS          YES
*
0182 B6 8011    LDA A TP1DAT GET BYTE
0185 16          TAB
0186 FB 000F R  ADD B CKSUM    FORM CHECKSUM
0189 F7 000F R  STA B CKSUM
018C 5F          CLR B
018D 39          RTS
*
* STOP TAPE AFTER A READ
*
018E 36          T1ISTP PSH A
018F 86 17      LDA A #$17
0191 B7 8010    STA A TP1ST
0194 32          PUL A
0195 39          RTS
*
* START TAPE FOR OUTPUT
*
0196 37          T2OTZ PSH B
0197 36          PSH A
0198 FF 0151 R  STX TXSV
019B C6 17      LDA B #$17    MASTER RESET
019D F7 8014    STA B TP2ST
01A0 C6 5D      LDA B #$5D    RTS:=1
01A2 F7 8014    STA B TP2ST
*
01A5 CE 0500    LDX #$0500    DELAY 2 SECS.
01A8 BD 01CE R  JSR TDELY
*
01AB 32          PUL A
01AC 33          PUL B
01AD FE 0151 R  LDX TXSV
01B0 39          RTS
*
* WRITE A BYTE TO TAPE
*
01B1 37          T2OUT PSH B
01B2 F6 8014    T2OUTA LDA B TP2ST GET STATUS
01B5 C5 02      BIT B #$02    READY?
01B7 27 F9      BEQ T2OUTA    NO
*
01B9 B7 8015    STA A TP2DAT YES, WRITE BYTE
01BC 33          PUL B
01BD 39          RTS
*
* STOP TAPE AFTER A WRITE
*
01BE 4F          T2OSTP CLR A    WRITE PAD CHARS
01BF BD 01B1 R  JSR T2OUT
01C2 BD 01B1 R  JSR T2OUT
01C5 BD 01B1 R  JSR T2OUT
01C8 86 17      LDA A #$17
01CA B7 8014    STA A TP2ST
01CD 39          RTS
*
01CE 4F          TDELY CLR A
01CF 4C          TDELY1 INC A

```

```

01D0 26 FD      BNE TDELY1
      *
01D2 09      DEX
01D3 26 FA      BNE TDELY1
01D5 39      RTS
      *
      *
      *
01D6 05D9  R TABLES FDB **$0403
01D8 01D8  R INBUF EQU *
01D8 03D8  R OTBUF EQU **$200
      *
      END

```

```

CKSUM 000F R
CRLF 0006 RX
DXSV 0014 R
EOF 000E R
GETB 0016 RN
GETBI 002A R
INBUF 01D8 R
INEEE 0003 RX
INITIO 0051 RN
INPIR 0010 R
MONITOR 000C RN
OTBUF 03D8 R
OPIR 0012 R
OUTB 0035 RN
OUTBI 0047 R
PJAIAI 0000 RX
RD1 007D R
RD2 009B R
RD3 00A0 R
RD4 00A8 R
RD5 00AB R
RD6 00B1 R
RDBUF 0074 R
TIGET 0176 R
TIINZ 0153 R
TIISTP 018E R
T2OSTP 01BE R
T2OTZ 0196 R
T2OUT 01B1 R
T2OUTA 01B2 R
TABLES 01D6 RN
TAPERR 00F7 R
TDLY 01CE R
TDLYI 01CF R
TDRIVE 0000 RN
TPIDA 8011
TPIST 8010
TP2DA 8015
TP2ST 8014
TXSV 0151 R
UPDATE 0009 RN
WREOF 0062 RN
WRITBF 011E R
WRIBFA 0132 R
WRIBFB 0141 R
WRIBFC 0149 R

```

APPENDIX K

ICOM Floppy Disk IO Listing


```

0000 0000 N      NAM DURV
      *
      *      DISK DRIVERS FOR LINKING LOADER
      *      C COPYRIGHT 1977 BY
      *      ROBERT D. GRAPPEL LEXINGTON MASS.
      *      AND JACK E. HEMENWAY BOSTON MASS.
      *      ALL RIGHTS RESERVED
      *
      * ENTRY POINTS IN DRIVER
      *
0000 002C N      ENT TABLES
0000 0003 N      ENT UPDATE
0000 0006 N      ENT MONITOR
0000 000B N      ENT GETB
0000 0017 N      ENT OUTB
0000 0023 N      ENT WREOF
0000 002B N      ENT INITIO
0000 0000 N      ENT RESTR
      *
      * LOCATIONS IN PROM BOOTSTRAP FDOs
      *
0000 7E E838 RESTR JMP $E838
0003 7E E820 UPDATE JMP $E820
0006 7E E0E3 MONITOR JMP $E0E3
0009 0000 OCNTR EQU $0000
0009 E929 RIX EQU $E929
0009 E9AA WRT EQU $E9AA
0009 0002 DXSV RMB 2
      *
      * GET A BYTE RETURN IN A REGISTER
      * CARRY FLAG SET IF EOF
      *
000B 37 GETB PSH B
000C FF 0009 R STX DXSV
000F BD E929 JSR RIX
0012 FE 0009 R LDX DXSV
0015 33 PUL B
0016 39 RTS
      *
      * OUTPUT BYTE IN A REGISTER
      *
0017 37 OUTB PSH B
0018 FF 0009 R STX DXSV
0018 BD E9AA JSR WRT
001E FE 0009 R LDX DXSV
0021 33 PUL B
0022 39 RTS
      *
      * WRITE NULLS TO LAST SECTOR
      *
0023 4F WREOF CLR A
0024 BD E9AA JSR WRT
0027 91 00 CMP A OCNTR
0029 26 F8 BNE WREOF
      *
002B 39 INITIO RTS DUMMY INIT
      *
      * START OF LINKING LOADER TABLES
      *
0061      *
0062 002C 002E R TABLES FDB.*+2
0063      *
0064      END

```

```

DURV 0000 RN
DXSV 0009 R
GETB 000B RN
INITIO 002B RN
MONITOR 0006 RN
OCNTR 0000
OUTB 0017 RN
RESTR 0000 RN
RIX E929
TABLES 002C RN
UPDATE 0003 RN
WREOF 0023 RN
WRT E9AA

```


Index

BADDR 2	OUTS 6
COMPAR 5, 6	OUT4HS 2, 6
CRLF 2, 5, 6	PDATA1 2, 5, 6, 7
GETB 2, 7	PRYTSYM 2, 5, 6
INEEE 2, 7	PUNCH 2, 6
LKPSYM 4, 5	RDBUF 7
LOAD 1, 2, 3, 4, 5	STOSYM 4, 5
LOADE 2, 6	TDELY 7
LOADM 2, 4, 5	T1GET 7
LOADN 2, 4, 5	T1INZ 7
LOADP 2, 3	T1ISTP 7
LOADR 2, 3, 5	T2OSTP 7, 8
LOADX 2, 5	T2OTZ 7, 8
LOAD2 2, 3, 4, 5	T2OUT 7, 8
MEMCHK 3, 4, 5	UPDATE 6, 8
MONTOR 2, 5	WREOF 6, 8
OUTB 6, 8	WRITBF 7
OUTEEE 6	

Note: The page numbers in bold type face indicate either the definition or the primary reference to the item.

BYTE Publications, Inc.
Production Credits

Blaise Liffick — Technical Editor
Edmond Kelly Jr. — Production Manager
Patricia Curran — Production Assistant
Walter Banks, University of Waterloo, CCNG, Bar Codes

George Banta Company, Printing
Dawson Advertising, Cover Art

A Note About Bar Codes . . .

Bar codes are the newest form of machine readable data representation. They are used in all PAPERBYTE™ software products in BYTE magazine articles and self contained book publications and combine efficiency of space, low cost, and ease of data entry with the need for mass produced machine readable representations of software. Bar codes were originally used for product identification in inventory control and supermarket checkout applications. Today, because of their direct binary representation of data, they are an ideal computer compatible communications medium. In the application of bar codes to software distribution (such as PAPERBYTE books and articles), the use of a simple but reliable optical scanning wand and an appropriate program provides a convenient means for the user to acquire software.

Our intent in making PAPERBYTE software available in bar code form is to provide a method of conveying machine readable information from documentation to the memories and mass storage of a user's system on a one time basis. We suggest that the user of software obtained in this manner should locally record the data on the mass storage devices of his system after the data has been scanned from the printed page. The PAPERBYTE bar code representations provide a standardized means of obtaining the data, but they cannot be compared to the convenience of local mass storage devices such as floppy disks, digital cassettes or audio cassettes. Thus if repeated use of the software obtained from bar code is anticipated, we recommend that the user make a copy on some form of magnetic medium.

Bar Code Loader by Ken Budnik, the first in the PAPERBYTE series of software books, provides a brief history of bar codes, a look at the PAPERBYTE bar code format including flowcharts, a general bar code loader algorithm and well documented programs with complete implementation and checkout procedures for 6800, 6502 and 8080/Z-80 based systems.

LINK68

is a one pass linking loader which allows separately translated relocatable object modules to be loaded and linked together to form a single executable load module. It produces a Load Map and a load module in Motorola MIKBUG loader format. The Linking Loader requires 2 K bytes of memory, a system console such as a Teletype, a system monitor such as the Motorola MIKBUG read only memory program or the ICOM Floppy Disk Operating System (FDOS), and some form of mass file storage such as dual cassette recorders or a floppy disk.

It was the express purpose of the authors of this book to provide everything necessary so that the user can easily learn what he or she needs to know about the system. By providing not only the source code and PAPERBYTE™ bar code listings, but also a detailed description of the major routines of the Linking Loader, they intend to provide the user with an opportunity to learn about the nature of linking loader design and implementation, as well as simply acquiring a useful software tool.

